



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1630	2643A 7	GEAR HOUSING ASSEMBLY, CO	1,1		*
-	1630	2643A 8	GEAR HOUSING ASSEMBLY, CO	1,1		*
-	1630	2643A12	GEAR HOUSING ASSEMBLY, CO	,1		#
-	1630	2643A13	GEAR HOUSING ASSEMBLY, CO	,1		#
-		2643A20	GEAR HOUSING ASSEMBLY, CO	,1		
-		2643A21	GEAR HOUSING ASSEMBLY, CO	,1		
-		2643A26	GEAR HOUSING ASSEMBLY, CO	,1		
-		2643A27	GEAR HOUSING ASSEMBLY, CO	,1		
1	1630	2643A 1	GEAR HOUSING ASSEMBLY SE	1,1		*
1	1630	2643A 9	GEAR HOUSING ASSEMBLY SE	,1		#
47		30599	CAM, SHIFT	1,1,1		
48		31334	FOLLOWER, SHIFT CAM	1,1,1		
49	24	31333	SPRING, COMPRESSION - CAM	1,1,1		
50	15	30522A 1	SHIM ASSEMBLY, FORWARD C	AR,AR,		
51	30	21889	BEARING, BALL - FORWARD GI	,1		
52	43	30880A 1	FORWARD GEAR ASSEMBLY(2	1,1,1		
52	43	48577	FORWARD GEAR ASSEMBLY(3	,1		
53	31	22458	BEARING, ROLLER - FORWARD	1,1,1		
54	52	32473A 1	RATCHET ASSEMBLY, SLIDING	1,1,1		
54	52	47581	RATCHET ASSEMBLY, SLIDING	,1		
55	53	32449	RING, RETAINING - CROSS P	1,1,1		
56	17	30535	PIN, CROSS - RATCHET TO PR	1,1,1		
57	44	33581	SHAFT, PROPELLER	1,1		
57	44	47935	SHAFT, PROPELLER	1,1,1		
58	43	30882A 3	REVERSE GEAR ASSEMBLY(2I	,1		
58	43	48578	REVERSE GEAR ASSEMBLY(3I	1,1,1		
59	12	30531	WASHER, THRUST - REVERSE	1,1,1		
60	30	21889	BEARING, BALL - REVERSE GE	1,1,1		
61	15	30532A 1	SHIM ASSEMBLY, THRUST WA	AR,AR,		
62	25	30529	"O" RING, BEARING CARRIER	1,1,1		
63		30541A 1	BEARING CARRIER ASSEMBLY	1,1,1		
64	31	22458	BEARING, ROLLER - BEARIN	1,1,1		
65	26	30530	OIL SEAL, BEARING CARRIER	1,1,1		
66	12	30528	WASHER, GEAR HOUSING COV	1,1,1		
67		30537	COVER, GEAR HOUSING	1,1,1		
68	23	33582	COLLAR, GUIDE - PROPELLER SI	1,1		
70	48	31105A 1	PROPELLER ASSEMBLY (2 BLAD	1,		
70	48	45890A 1	PROPELLER ASSEMBLY(3 BLAD	,1		
70	48	34398A 1	PROPELLER ASSEMBLY (2 BLAD	OPT.,0		
70	48	31214A 1	PROPELLER ASSEMBLY (2 BLAD	OPT.,0		
70	48	27220A 1	PROPELLER ASSEMBLY (2 BLAD	OPT.,0		