



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		29633A 1	PILOT ASSEMBLY	1,1	
2	30	20066	BEARING, BALL - DISTRIBUTOR	1,1	
3	24	29275	SPRING, HORSESHOE	1,1	
4	17	27962	PIN, SPRING TERMINAL	1,1	
5	12	29245	WASHER, SPRING TERMINAL PI	1,1	
6	43	28509A 1	SECTOR GEAR AND PIN ASSEMB	1,1	
7	17	27961	PIN, SPRING RETAINER	1,1	
8	22	23612	FITTING, GREASE - SECTOR GI	1,1	
9		29558A 1	THROTTLE ACTUATOR ASSEMB	1,1	
10	23	26602	BUSHING, NYLON - THROTTLE	1,1	
11	10	20665	SCREW, THROTTLE ACTUATOR	2,2	
12	12	20128	WASHER, THROTTLE ACTUATOR	2,2	
--	13	26396	LOCKWASHER, THROTTLE ACTI	2,2	
13		28511	ADAPTOR, DISTRIBUTOR	1,1	
14	12	27939	WASHER, THRUST - DISTRIBUT	1,1	
15	14	27960	TAB WASHER, CAP LOCKING	1,1	
16	13	27959	WASHER, WAVE - TAB WASHER	1,1	
17		27955	CAP, ADAPTOR AND PILOT FAST	1,1	
18	45	28473A 1	DRIVE SHAFT ASSEMBLY, DISTF	1,1	
19	24	28469	SPRING, DISTRIBUTOR DRIVE	1,1	
20	30	26379	BEARING, BALL - DRIVE SHAFT	1,1	
21	53	26406	RING, SNAP - BALL BEARING RE	1,1	
22	22	25094	FITTING, GREASE - ADAPTOR	1,1	
23	10	20542	SCREW, ADAPTOR AND PILOT T	4,4	
24	13	26992	LOCKWASHER, ADAPTOR AND F	4,4	
25	10	22040	SCREW, ADAPTOR AND PILOT T	3,3	
26	12	20084	WASHER, ADAPTOR AND PILOT	3,3	
27	11	20083	NUT, ADAPTOR AND PILOT FAST	3,3	
28		20140	BELT, TIMING	1,1	
29	23	27957	SPACER, DRIVEN PULLEY	1,1	
30	28	28657	KEY, MAGNETO DRIVING	1,1	
31		24807	PULLEY, DRIVEN	1,1	
32		20136	FLANGE, DRIVE PULLEY	1,1	
33	12	20138	WASHER, PULLEY CLAMPING SC	1,1	
34	13	26996	LOCKWASHER, PULLEY CLAMPPI	1,1	
35	10	20139	SCREW, PULLEY CLAMPING	1,1	
36		29632	BRACKET, GUIDE RACK	1,1	
37		26610A 5	GUIDE RACK ASSEMBLY	1,1	
38	25	29727	GROMMET, GUIDE RACK BRACK	1,1	
39	10	24227	SCREW, THROTTLE STOP ADJU	1,1	
40	11	20890	NUT, THROTTLE STOP ADJUSTI	1,1	