



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		29766	WIRING HARNESS, INTERNAL	1,1		
2		30050	TERMINAL, HARNESS AND ME	AR,AR		
3	24	28975	SPRING, GARTER-INTERNAL WI	1,1		
4		26079	PLATE, WIRING HARNESS TO B	1,1		
5	10	26128	SCREW, HARNESS PLATE FASTI	4,4		
6	54	22783	"S" CLIP, RECTIFIER HARNESS L	2,2		
7		29691	RECTIFIER ASSEMBLY	1,1		
8	13	26993	LOCKWASHER, RECTIFIER MO	1,1		
9	11	21929	NUT, RECTIFIER MOUNTING SC	1,1		
10	32	28052	SLEEVE, RUBBER-RECTIFIER HA	2,2		
11	32	28373	SLEEVE, RUBBER - RECTIFIER S	2,2		
12	10	29852	SCREW, HARNESS AND STATOF	3,3		
13	11	29488	NUT, HARNESS AND STATOR LE	3,3		
14	50	29037	STARTER MOTOR ASSEMBLY	1,1		
15	15	26496	SHIM, STARTER MOTOR TO CR/	AR,AR		
16	10	22698	SCREW, STARTER MOTOR TO C	2,2		
17	13	26993	LOCKWASER, STARTER MOTOR	2,2		
18		27026	BRACKET, SUPPORT-STARTER :	1,1		
19	12	24664	WASHER, THRU BOLT-BRACKET	1,1		
20	13	26992	LOCKWASHER, THRU BOLT-BRA	2,2		
21	11	20890	NUT, THRU BOLT-BRACKET TO :	2,2		
22		26511	CABLE, WIRE-STARTER TO UPP	1,1		
23		25596	CABLE, WIRE-STARTER TO LOW	1,1		
24	54	20534	CLAMP, LOWER CABLE-STARTEI	1,1		
25		26478A	JUMPER ASSEMBLY, SOLENOID	1,1		
26	32	26622	SLEEVE, JUMPER	1,1		
27	10	29197	SCREW, WIRING HARNESS GRC	1,1		
28		28937	SOLENOID, STARTER	2,2		
29		28922	LEAD, JUMPER-SOLENOID TO S	1,1		
30	13	26993	LOCKWASHERM SOLENOID TER	4,4		
31	11	20083	NUT, SOLENOID TERMINAL (5/1)	4,		
32	13	26996	LOCKWASHER, SOLENOID TERN	3,3		
33	11	20645	NUT, SOLENOID TERMINAL #10	4,4		
34	10	29238	SCREW, SOLENOID TO STARTEI	4,4		
35	54	23567	CLAMP, WIRING HARNESS TO S	1,1		
36		22789	"D" WASHER, HARNESS CLAMP	1,1		
37	10	26548	SCREW, HARNESS CLAMP FAST	1,1		
38		29714	BLOCK, TERMINAL-UPPER FUEL	1,1		
39	10	24241	SCREW, TERMINAL BLOCK FAST	2,2		
40	13	26996	LOCKWASHER, TERMINAL BLOC	2,2		
41	12	26914	WASHER, TERMINAL BLOCK FAC	2,2		