



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	393	1282A13	DISTRIBUTOR ASSEMBLY, COM	1,1	
1	393	1282	HOUSING, PRIMARY	1,1	
2	22	25885A 1	ELBOW ASSEMBLY, VENT HOSE	1,1	
3	393	1504A 5	BREAKER ASSEMBLY, COMPLE	2,2	
4	16	29230	STUD, PRIMARY LEAD AND T	2,2	
5	11	29236	NUT, PRIMARY LEAD FASTEN	2,2	
6	393	1586	GROMMET, PLASTIC-BREAKER	2,2	
7	12	26439	WASHER, BREAKER PIVOT F	2,2	
8	18	23858	COTTER PIN, BREAKER TO F	2,2	
9	393	1287A 2	CAM WICK & HOLDER ASSEM	2,2	
10	10	20597	SCREW, BREAKER HOLDER TO	2,2	
11	393	1283	CONDENSER	2,2	
12	10	29434	SCREW, CONDENSER TO HOU	2,2	
13	393	1656	WIRE, PRIMARY GROUND	1,1	
14	30	26379	BEARING, BALL-CAM SHAFT	2,2	
15	393	1541A 2	SHAFT ASSEMBLY, DISTRIBUT	1,1	
16	23	28933	BUSHING, NYLON-CAM SHAF	1,1	
17	25	26543	"O"RING, CAM SHAFT	1,1	
18	17	25319	PIN, ROLL-CAM SHAFT	1,1	
19	13	26917	WAVE WASHER, BALL BEARIN	2,2	
20	393	1278	ADAPTOR, HOUSING TO DIST	1,1	
21	27	26412	GASKET, HOUSING TO ADAPTI	1,1	
22	10	29180	SCREW, ADAPTOR TO HOUSIN	4,4	
23	393	1280	ROTOR, DISTRIBUTOR	1,1	
24	27	26446	GASKET, DISTRIBUTOR CAP T	1,1	
25	393	1573A 1	DISTRIBUTOR CAP ASSEMBLY	1,1	
26	393	1293A 1	BRUSH AND SPRING ASSEM	1,1	
27	22	25885	ELBOW, VENT HOSE-DISTRIE	1,1	
28	393	1277	SIDE INLET ASSEMBLY	1,1	
29	393	1292A 1	BRUSH AND SPRING ASSEM	1,1	
30	27	26447	GASKET, SIDE INLET TO DIST	1,1	
31	10	29167	SCREW, SIDE INLET TO DISTR	1,1	
32	10	29158	SCREW, DISTRIBUTOR CAP TO	2,2	
33	14	29157	TAB WASHER, DISTRIBUTOR C	2,2	
34	393	1621A 1	HIGH TENSION CABLE ASSEMB	1,1	
35	393	1622A 1	HIGH TENSION CABLE ASSEM	1,1	
36	393	1275	SLEEVE, TERMINAL AND COVE	2,2	
37		20121	CONNECTOR, HIGH TENSION	2,2	
38	25	26547	GROMMET, HIGH TENSION CAE	2,2	
39		26453A 1	SPARK PLUG LEAD ASSEMBLY	3,3	
40		26453A 1	SPARK PLUG LEAD ASSEMBLY	3,3	