



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	22339	NUT, FLYWHEEL	1,1		
2	12	26617	WASHER, FLYWHEEL NUT	1,1		
3	28	20094	KEY, FLYWHEEL DRIVE	1,1		
4	212	1424A 4	FLYWHEEL ASSEMBLY	1,1		
5		22823	PULLEY, FLYWHEEL	1,1		
6	17	26618	DOWEL PIN, PULLEY TO FLYW	1,1		
7	12	25293	WASHER, PULLEY TO FLYWHE	1,1		
8	50	25263	RATCHET, FLYWHEEL	1,1		
9	10	29238	SCREW, RATCHET TO FLYWHI	3,3		
10	398	1658	STATOR, ALTERNATOR	1,1		
11		30050	TERMINAL, STATOR LEAD WIF	2,2		
12	10	29283	SCREW, STATOR TO UPPER EN	4,4		
13	541	24836	CLIP, STATOR LEAD TO EXHAU	1,1		
14		22789	"D" WASHER, CLIP FASTENING :	1,1		
15	10	26646	SCREW, STATOR LEAD CLIP FAS	1,1		
16	54	22783	"S" CLIP, STATOR LEAD TO BOT	3,3		