



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1613	1587A 2	GEAR HOUSING ASSEMBLY, CO	1		
-	1613	1587A 3	GEAR HOUSING ASSEMBLY, CO	.1		
1	1613	1587A 1	GEAR HOUSING ASSEMBLY	1,1		
2	31	20231	BEARING, ROLLING- PROP	2,2		
3	16	29078	STUD, GEAR HOUSING TO	2,2		
4	16	29079	STUD, GEAR HOUSING TO	1,1		
5	35	29073	SCREEN, WATER INTAKE	1,1		
6	16	28771	STUD, WATER PUMP COVE	3,3		
7	45	26196	DRIVE SHAFT (STANDARD)	1,		
7	45	27866	DRIVE SHAFT (LONG)	.1		
8	43	27889	GEAR, PINION	1,1		
9	12	22025	WASHER, PINION GEAR TO F	1,1		
10	11	20220	NUT, PINION GEAR RETAINI	1,1		
11	15	20929A 1	SHIM, DRIVE SHAFT BALL BE	AR,AR		
12	30	20861	BEARING, BALL - DRIVE SHA	1,1		
13	25	20266	"O"RING, DRIVE SHAFT CAR	1,1		
14		26191A 1	OIL SEAL CARRIER ASSEMB	1,1		
15	26	23300	OIL SEAL, CARRIER	1,1		
16		26192	COVER, CARRIER RETAINER	1,1		
17	13	26494	WASHER, WAVE - RETAINER	1,1		
18	46	26188A 2	WATERPUMP CARTRIDGE AS	1,1		
19		29104	INSERT, WATER PUMP CAR	1,1		
20	28	28657	KEY, CARTRIDGE LOCATING	1,1		
21	47	30041	IMPELLER, WATER PUMP	1,1		
22	17	23733	PIN, IMPELLER DRIVE	1,1		
23	27	26187	GASKET, LOWER - WATER P	1,1		
24		26185	PLATE, FACE - WATER PUMP	1,1		
25	27	26186	GASKET, UPPER - WATER PL	1,1		
26		26219A 1	WATER PUMP COVER ASSEM	1,1		
27	26	23517	OIL SEAL	1,1		
28	26	26207	SEAL, RUBBER - WATER IN	2,2		
28	26	26207	SEAL, RUBBER - WATER INLI	1,1		
29	25	20273	RING, RUBBER - CENTRIFUG	1,1		
30	32	29273	TUBE, WATER INTAKE - LOW	1,1		
31	32	26208	SLEEVE, WATER INTAKE TUI	1,1		
32	22	26220A 1	WATER VALVE AND ADAPTO	2,2		
33	21	26491	VALVE, WATER	2,2		
34	54	26492	CLAMP, VALVE TO ADAPTO	2,2		
35	15	21158A 1	SHIM, VALVE ADAPTOR TO G	AR,AR		
36	44	28762A 1	PROPELLER SHAFT ASSEMB	1,1		
37	42	28761	GEAR, PROPELLER	1,1		