



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1613	1563A 2	GEAR HOUSING ASSEMBLY, COI	1	
-	1613	1563A 5	GEAR HOUSING ASSEMBLY, COI	.1	
1	1613	1563A 1	GEAR HOUSING ASSEMBLY	1,1	
2	31	20231	BEARING, ROLLER - PROPEL	2,2	
3	16	29078	STUD, GEAR HOUSING TO D	2,2	
4	16	29079	STUD, GEAR HOUSING TO D	1,1	
5	35	26189	SCREEN, WATER INTAKE	1,1	
6	16	28771	STUD, WATER PUMP COVER	3,3	
7	45	26196	DRIVE SHAFT (STANDARD)	1,	
7	45	27866	DRIVE SHAFT (LONG)	.1	
8	43	27889	GEAR, PINION	1,1	
9		22025	WASHER, PINION GEAR TO RE	1,1	
10	11	20220	NUT, PINION GEAR RETAINING	1,1	
11	15	20929A 1	SHIM, DRIVE SHAFT BALL BEA	AR,AR	
12	30	20861	BEARING, BALL - DRIVE SHAFT	1,1	
13	25	20266	"O" RING, DRIVE SHAFT CARRIE	1,1	
14		26191A 1	OIL SEAL CARRIER ASSEMBLY	1,1	
15	26	23300	OIL SEAL, CARRIER	1,1	
16		26192	COVER, CARRIER RETAINER	1,1	
17	13	26494	WASHER, WAVE - RETAINER C	1,1	
18	46	26188A 2	WATER PUMP CARTRIDGE AS	1,1	
19		29104	INSERT, WATER PUMP CART	1,1	
20	28	28657	KEY, CARTRIDGE LOCATING	1,1	
21	47	30041	IMPELLER, WATER PUMP	1,1	
22	17	23733	PIN, IMPELLER DRIVE	1,1	
23	27	26187	GASKET, LOWER - WATER PUI	1,1	
24		26185	PLATE, FACE - WATER PUMP C	1,1	
25	27	26186	GASKET, UPPER - WATER PUM	1,1	
26		26219A 1	WATER PUMP COVER ASSEMBE	1,1	
27	26	23517	OIL SEAL	1,1	
28	26	26207	SEAL, RUBBER - WATER INLE	2,2	
28	26	26207	SEAL, RUBBER - WATER INLE	1,1	
29	25	20273	RING, RUBBER - CENTRIFUGAI	1,1	
30	32	26489	TUBE, WATER INTAKE - LOWE	1,1	
31	32	26208	SLEEVE, WATER INTAKE TUBE	1,1	
32	22	26220A 1	WATER VALVE AND ADAPTOR	2,2	
33	21	26491	VALVE, WATER	2,2	
34	54	26492	CLAMP, VALVE TO ADAPTOR	2,2	
35	15	21158A 1	SHIM, VALVE ADAPTOR TO GE	AR,AR	
36	44	26213	SHAFT, PROPELLER	1,1	
37	42	28442	GEAR, PROPELLER	1,1	