



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		39028A 3	ADAPTOR PLATE ASSEMBLY	1		
1		52402A 1	ADAPTOR PLATE ASSEMBLY	1		0
2	12	36554	WASHER, NYLON - WATER OU	1		
3	26	36556	SEAL, RUBBER - WATER OUTL	1		4
4		39044	SEAL, RUBBER - ADAPTOR PL	1		
5	27	45748	GASKET, POWERHEAD PLATE	1	SERIAL #2080069-09999999	4
5	27	31557	GASKET, POWERHEAD TO ADAF	1	SERIAL 00000000-#2080068	4
5	27	31557	GASKET, POWERHEAD TO ADAF	1		
6	10	22486	SCREW, ADAPTOR PLATE TO DF	1		
7	13	26992	LOCKWASHER, ADAPTOR PLATE	1		
8	27	52417	GASKET, ADAPTOR PLATE TO D	1		
9	2124	2649	COWL, BOTTOM	1		
10		39085	ANCHOR, LATCH - BOTTOM COW	1		
11	10	22485	SCREW, LATCH ANCHOR TO BO	2		
12	13	26992	LOCKWASHER, LATCH ANCHOR	2		
13	25	39054	GROMMET, CHOKE SHAFT - BOT	1		
14		39051A 1	PLATE ASSEMBLY, COVER - BOT	1		
15		39068	PAD, SOUND - COVER PLATE	1		
16	10	30009	SCRW, COVER PLATE TO BOTTC	2		
17		39058	SEAL, SHIFT HANDLE - BOTTOM	1		
18		39145	MOUNT, RUBBER - BOTTOM CO	1		
19		39144	MOUNT, RUBBER - BOTTOM COV	1		
20	10	31208	SCREW, RUBBER MOUNT TO BC	4		
21	11	46887	NUT, ADAAPTOR PLATE TO RUE	2		
22		39565	SPOOL, NYLON - TOP COWL LAT	1		
23	10	20456	SCREW, NYLON SPOOL TO BOT	1		
24	13	26996	LOCKWASHER NYLON SPOOL SI	1		
25		39147	ADAPTOR, REAR MOUNT TO BO	1		
26	10	22486	SCREW, REAR MOUNT ADAPTO	2		
27	13	26992	LOCKWASHER, REAR MOUNT AI	2		
28		39146	MOUNT, RUBBER - BOTTOM COV	1		
29	13	26992	LOCKWASHER, REAR MOUNT	1		
30	11	20088	NUT, REAR MOUNT TO ADAPTO	1		
31	11	46887	NUT, ADAPTOR PLATE TO REAF	1		
32		39087	ROD, COWL LATCH - BOTTOM CI	1		
33		39099	BRACKET, COWL LATCH ROD	1		
34	10	22486	SCREW, COWL LATCH BRACKET	1		
35	13	26992	LOCKWSHER, COWL LATCH BRA	1		
36		39083	HANDLE, COWL LATCH ROD(POI	1		
37		39098	HANDLE, COWL LATCH ROD (ST	1		
38	22	22881	PUSHING NYLON - COWL LATCH	2		