



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1463	3557A 1	CLAMP BRACKET ASSEMBLY	2		
2		22477A 4	THUMB SCREW ASSEMBLY	2		
3	12	20214	WASHER, THUMB SCREW	2		
4	1402	134A 1	SWIVEL BRACKET ASSEMBLY	1		
5		20203	DISC, FRICTION	2		
6		20701A 1	CLAMP PLATE ASSEMBLY	1		
7		20203	DISC, FRICTIND	2		
8	10	21625	SCREW, CLAMP PLATE MOUNTII	2		
9	13	26992	LOCKWASHER, CLAMP PLATE M	2		
10	17	20891	SWIVEL PIN, CO-PILOT DISC	1		
11	15	20695	SHIM, CLAMP BRACKET TO SWI	2		
12	16	20694	STUD, CLAMP BRACKET TO SWI	1		
13	11	20696	NUT, CLAMP BRACKET TO SWIV	2		
14	23	20658	SPACER, CLAMP BRACKET STUC	1		
15	16	20657	STUD, CLAMP BRACKET	1		
16	13	26993	LOCKWASHER, CLAMP BRACKET	2		
17	11	20083	NUT, CLAMP BRACKET STUD	2		
18	17	28848A 2	TILT LOCK PIN ASSEMBLY	1		
19		20951	CO-PILOT DISC ASSEMBLY	1		
20	10	47277	SCREW, CO-PILOT ADJUSTING	1		
21		33512	LEVER, TILT STOP	1		
22	10	20217	SCREW, ANCHOR-TILT STOP LE	1		
23	10	27790	SCREW, RETAINING-TILT STOP	1		
24	13	20846	WASHER, WAVE-RETAINING SCI	1		
25	11	46887	NUT, TILT STOP LEVER SCREW	2		
--	38	31042	SERIAL PLATE	1		
--	10	28642	SCREW, DRIVE-SERIAL PLATE T	2		