



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	11	20696	NUT, FLYWHEEL	1			
2	12	36282	WASHER, FLYWHEEL NUT	1			
3	25	36284	"O" RING, FLYWHEEL HUB	1			
4	28	20094	KEY, FLYWHEEL DRIVE	2			
5	219	2246A 4	FLYWHEEL ASSEMBLY, COMPLE	1			
6	23	34367	COLLAR, FLYWHEEL DUST SH	1			
7	13	22027	WASHER, WAVE-MAGNETO CAM	1			
8	398	2574A 4	STATOR PLATE ASSEMBLY, CON	1			
9		39326A 1	SHIELD ASSEMBLY, STATOR F	1			
10	10	45742	SCREW, SHIELD TO STATOR	2			
11	13	26996	LOCKWASHER, SHIELD SCRE	2			
12		33904	RING, HOLD DOWN-STATOR P	1			
13	10	35400	SCREW, HOLD DOWN RING TC	4			
14	398	2230	CAM, BREAKER	1			
15	15	33910015	SHIM, STATOR PLATE TO UPPE	1			
16	54	24836	CLIP, STATOR LEAD	2			
17	10	30009	SCREW, STATOR LEAD CLIP TO	2			
18		22789	"D" WASHER, LEAD CLIP SCRE	2			
19		34363A 2	THROTTLE CAM BRACKET ASSE	1			
20	10	35450	SCREW, CAM BRACKET TO STA	2			
21		52400	BRACKET, MOUNTING-THROTTL	1			
22	10	22956	SCREW, MOUNTING BRACKET T	2			
23	10	32228	SCREW, MOUNTING BRACKET T	1			
24	10	52437	SCREW, THROTTLE BRACKET T	1			
25	13	26992	LOCKWASHER, THROTTLE BRAI	1			
26	12	29245	WASHER, THROTTLE BRACKET	1			
27		25788	PLATE, CLAMPING-THROTTLE C	1			
28	10	20055	SCREW, CLAMPING PLATE TO M	2			
29	13	26996	LOCKWASHER, CLAMPING PLAT	2			