



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		39082A 4	FUEL PUMP ASSEMBLY	1		
2	21	22974A 3	CHECK VALVE ASSEMBLY	1		
3		31503A 1	DIAPHRAGM KIT, FUEL PUMF	1		4
4			GASKET, FUEL PUMP TO SPZ	1		4
5	10	29249	SCREW, FUEL PUMP TO SPACEF	4		
6		39259	SPACER, FUEL PUMP	1		
7	22	39079	ELBOW, FUEL PUMP TO CARBUF	1		
8	22	33373	ELBOW, FUEL PUMP SPACER TC	1		
9	32	39484	HOSE, PRESSURE - FUEL PUMP	1		
10	22	33373	ELBOW, CYLINDER BLOCK TO I	1		
11	54	20387	CLAMP, PRESSURE HOSE FAST	2		
12	32	39485	FUEL LINE, FUEL PUMP TO ADA	1		
13		32454	ADAPTOR, CHECK UNIT (FUEL LI	1		
14		39052	SEAL, ADAPTOR TO BOTTOM CC	1		
15	10	37978	SCREW, ADAPTOR TO ADAPTOF	2		
NS	12	26996	LOCKWASHER, adaptor screw	2		
16	24	28357	SPRING, ADAPTOR SCREW	2		
17	11	20110	NUT, ADAPTOR SCREW	2		