



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1639	3558A 2	GEAR HOUSING ASSEMBLY, CO	1		
1	1639	3558A 1	GEAR HOUSING ASSEMBLY	1		
2	16	23659	STUD, GEAR HOUSING TO D	1		
3	10	28634	SCREW, GREASE FILLER	1		
4	12	20260	WASHER, GREASE FILLER SI	1		
5	10	28653	SCREW, GEAR HOUSING VE	1		
6	12	20262	WASHER, GEAR HOUSING VI	1		
7	26	36556	SEAL, WATER TUBE	1		
8	31	52440	BEARING, ROLLER-PROPELL	1		
9	31	52398	BEARING, ROLLER-DRIVE SF	1		
10	45	52426	DRIVE SHAFT	1		
11	15	22759A 1	SHIM ASSEMBLY, BALL BEARIP	AR		
12	25	21720	"O" RING, DRIVE SHAFT	1		
13		52413A 1	PILOT ASSEMBLY, DRIVE SHAF	1		
14	26	52415	OIL SEAL, DRIVE SHAFT PILC	1		
15	30	25124	BEARING, BALL-DRIVE SHAFT	1		
16&2	43	52423A 1	GEAR ASSEMBLY (PINION AND	1		
17	11	20110	NUT, PINION GEAR LOCKING	1		
18	44	52441	SHAFT, PROPELLER	1		
19	30	52422	BEARING, BALL-PROPELLER S	1		
20	23	52442	SPACER, PROPELLER SHAFT	1		
21	15	52439A 1	SHIM ASSEMBLY, BALL BEARIP	AR		
23	28	52438	KEY, PROPELLER GEAR TO PF	1		
24	23	52425	SPACER, BALL BEARING TO W	1		
25	25	22762	"O" RING, WATER PUMP HOU	1		
26	46	52399A 1	WATER PUMP HOUSING ASSE	1		
27	26	52414	OIL SEAL, WATER PUMP HOL	1		
28	47	39074	IMPELLER, WATER PUMP HOL	1		
29	17	39076	PIN, IMPELLER DRIVE	1		
30		52401	COVER, WATER PUMP HOUSI	1		
31	11	28010	NUT, PROPELLER	1		
32	11	46793	NUT, DRIVE SHAFT HOUSING TC	2		