



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	4012	822360A14	TOP COWL	1	(BLACK)(ELECTRIC) SEE NOTE	
1	4012	822360A15	TOP COWL	1	(SILVER)(ELECTRIC) SEE NOTE	
1	4012	822360A16	TOP COWL	1	(GRAY)(ELECTRIC)	
1	4025	828353A12	TOP COWL	1	(TRACKER-GRAPHITE GRAY)(EL	
1	4013	822361A15	TOP COWL	1	(BLACK)(MANUAL)	
1	4013	822361A16	TOP COWL	1	(GRAY)(MANUAL)	
2		819813	1 BRACKET-COVER LATCH	1		
3		18173	BRACKET-ROLLER LATCH	1		
4	13	53166	LOCKWASHER	2		
5	10	90285	SCREW	2		
6		F481434	GUIDE	2		
7	11	91925	PUSH NUT	4		
8	10	822512	SCREW (3/4 IN.)	3		
9		823685A	1 SOUND BLANKET KIT	1		
10		821912A	1 TRAP DOOR	1	(BLACK) OIL INJECTED	
10		821912A	2 TRAP DOOR	1	(SILVER) OIL INJECTED	1
10		821912A	3 TRAP DOOR	1	(TRACKER-GRAPHITE GRAY) OI	
11		823967	1 SEAL-TRAP DOOR	1	OIL INJECTED	
12	17	822055	1 HINGE PIN	1	OIL INJECTED	
13	10	821045	12 SCREW	2	OIL INJECTED	
14	12	40023	16 WASHER	2	OIL INJECTED	
15		821875F	1 UPPER CAP	1	(BLACK)	
15		821875F	2 UPPER CAP	1	(SILVER)	
15		821875F	4 UPPER CAP	1	(GRAY)	
15		821875F	3 UPPER CAP	1	(TRACKER-GRAPHITE GRAY)	
16	11	826833	6 NUT	2	(OIL INJECTED)	
17		823960	1 CATCH	1		
18	10	812832	1 SCREW (1/2 IN.)	1		
19	19	823865	2 CAP PLUG	2		
20	10	821300	16 SCREW	4		
21		47341A	1 STARTER ROPE	1	(MANUAL STARTING)	