



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	4025	828353A 7	TOP COWL ASSEMBLY	1	(BLACK-ELECTRIC)	
1	4025	828353A 8	TOP COWL ASSEMBLY	1	(SILVER-ELECTRIC)	
1	4025	828353A 9	TOP COWL ASSEMBLY	1	(TRACKER-SILVER COWL/BLAC	
1	4026	828354A 6	TOP COWL ASSEMBLY	1	(BLACK-MANUAL)	
1	4026	828354A 7	TOP COWL ASSEMBLY	1	(SILVER-MANUAL)	
2		828716A 2	CAP-COWL	1		
3		828352	SEAL	1		
4		828351 1	SEAL	1		
5		821875F 1	UPPER CAP	1	(BLACK)	
5		821875F 2	UPPER CAP	1	(SILVER)	
6		819813 1	BRACKET-COVER LATCH	1		
7		18173	BRACKET-ROLLER LATCH	1		
8	13	53166	LOCKWASHER	2		
9	10	90285	SCREW (5/16-18 X 5/8)	2		
10		F481434	GUIDE	2		
11	11	91925	PUSH NUT	4		
12	10	822512	SCREW (1/4-20 X 1)	3		
13	19	823865	CAP PLUG	2		
14	10	821300 16	SCREW (M6 X 16)	4		
15		823830	SUPPORT	2		
16	10	823187 1	SCREW (M4 X 14.5)	4		
17	13	26395	LOCKWASHER	4		
18		823394 1	BRACKET	1		
19	11	823751 5	NUT	4		
20		823685A 1	SOUND BLANKET KIT	1		
21		47341A 1	STARTER ROPE	1	(MANUAL STARTING)	