



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		4931A 7	GEAR HOUSING ASSEMBLY, CO	1	SEE NOTE 1 IN BLOCK COMMENT	
-	1643	4931A 8	GEAR HOUSING ASSEMBLY, CO	1	SEE NOTE 1 IN BLOCK COMMENT	
-	1643	4931A27	GEAR HOUSING ASSEMBLY, CO	1	SEE NOTE 1 IN BLOCK COMMENT	
-	1643	4931A28	GEAR HOUSING ASSEMBLY, CO	1	SEE NOTE 1 IN BLOCK COMMENT	
1	1643	4931A 6	GEAR HOUSING ASSEMBLY	1		
2	17	21438	PIN, DOWEL - GEAR HOUSIN	2		
3	16	33778	STUD, WATER PUMP BODY/	3		
4	16	57933	STUD, GEAR HOUSING TO D	2		
5	31	62091	BEARING, ROLLER - DRIVE S	1		
6		63850	SCREEN, WATER INTAKE - S	1		
6		63851	SCREEN, WATER INTAKE - P	1		
7	10	36070	SCREW, SCREENS TO GEAR	1		
8	11	45812	NUT, SCREEN TO GEAR HOL	1		
9		38071	PLATE, SUPPORT - EXHAUST	1		
10		37721	SEAL, EXHAUST TUBE	1		2,3,4
11	43	60245	GEAR, PINION - DRIVE SHAFT	1		
12	11	55910	NUT, PINION GEAR TO DRIVE	1		
13	27	32771	GASKET, WATER PUMP BASE	1		2,3,4
14	25	26855	"O" RING, WATER PUMP BASE	1		2,3,4
15	46	73842A 2	WATER PUMP BASE ASSEMBL	1		
16	26	26782	OIL SEAL, WATER PUMP BAS	1		
17	26	23300	OIL SEAL, WATER PUMP BA	1		
18	17	35973	DOWEL PIN, WATER PUMP E	2		
19	27	32769	GASKET, LOWER - WATER PUI	1		2,3,4
20		54705	PLATE, FACE - WATER PUMP E	1		
21	27	32770	GASKET, UPPER - FACE PLATE	1		2,3,4
22	47	65959	IMPELLER, WATER PUMP	1		
23	28	56662	KEY, IMPELLER DRIVE	1		
24	46	48746A 1	WATER PUMP BODY ASSEMBL	1		
25		48753	INSERT, WATER PUMP BOD	1		
26	26	32121	OIL SEAL, WATER PUMP BOI	1		
27	12	29245	WASHER, WATER PUMP BOD	3		
28	11	35045	NUT, WATER PUMP BODY ANI	3		
29	26	38452	SEAL, WATER PUMP BODY TO	1		2,3,4
30	12	38453	WASHER, CUPPED - WATER T	1		
31	25	20273	RING, RUBBER - CENTRIFUGAI	1		2,3,4
32	10	28634	SCREW, GREASE FILLER AND	2		
33	12	20260	WASHER, GREASE FILLER ANI	2		
34	19	48750	PLUG, GEAR HOUSING FLUSHI	1		
35	12	49221	WASHER, GEAR HOUSING FLL	1		
36		60241A 1	SHAFT ASSEMBLY, SHIF	1	UNITED STATES 4259229 AND I	