



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1554	4813A 2	DRIVE SHAFT HOUSING ASSEM	1		
1	1564	4812A 2	DRIVE SHAFT HOUSING ASSEM	1		
2	19	32297	PLUG, PLASTIC - TRIM TAB SC	1		
3	16	57932	STUD, DRIVE SHAFT HOUSING	1		
4	16	57935	STUD, DRIVE SHAFT HOUSING	1		
5	12	45176	WASHER, GEAR HOUSING TO D	2		
6	11	34933	NUT, GEAR HOUSING TO DRIVE	2		
7		47835	ROD, PUSH - REVERSE LOCK (S)	1		
7		47836	ROD, PUSH - REVERSE LOCK (L)	1		
8	11	46794	NUT, JAM - PUSH ROD	1		
9		47837	ROD END, PUSH ROD	1		
10	17	39023	PIN, PUSH ROD TO REVERSE LC	1		
11	18	25191	COTTER PIN, PUSH ROD PIN	1		
12		52917	GUIDE, PUSH ROD	1		
13		35474	COVER, LOWER MOUNT CLAMP	2		
14	10	29722	SCREW, COVER TO LOWER MOU	2		
15	11	35521	NUT, LOWER MOUNT CLAMP CC	2		
16		35473	CLAMP, LOWER MOUNT TO DRIP	2		
17	10	29256	SCREW, LOWER MOUNT CLAMP	4		
18	24	35522	SPRING, TENSION - LOWER MOU	4		
19		37395	MOUNT, RUBBER - LOWER	2		
20	10	49318	SCREW, LOWER MOUNT (5 1/2")	2		
21	12	28051	WASHER, LOWER MOUNT SCRE	2		
22	12	28053	WASHER, RUBBER - LOWER MO	2		
23	12	61709	WASHER, LOWER MOUNT SCRE	2		
24	11	25096	NUT, LOWER MOUNT SCREW	2		
25		37394	MOUNT, RUBBER - UPPER	2		
26		24929	PACKING, "U" CUP - UPPER MOL	2		
27		24935	COVER, UPPER MOUNT - OUTSII	2		
28		31120	COVER, UPPER MOUNT - INSIDE	2		
29	10	49987	SCREW, UPPER MOUNT COVER	4		
30	10	49988	SCREW, UPPER MOUNT COVER	4		
31	11	46886	NUT, UPPER MOUNT COVER FA	8		
32	12	30520	WASHER, UPPER MOUNT BOLT	2		
33	12	30521	WASHER, RUBBER - UPPER MOI	2		
34	12	30519	WASHER, UPPER MOUNT BOLT	2		
35	11	23161	NUT, UPPER MOUNT BOLT	2		
36	27	38501	GASKET, EXHAUST EXTENSION	1		4
37	11	61845	NUT, POWERHEAD TO DRIVE SH	8		
38		39526	TUBE, EXHAUST (SHORT SHAFT)	1		
38		46795	TUBE, EXHAUST (LONG SHAFT)	1		