



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1643	4814A 7	GEAR HOUSING ASSEMBLY, CO	1		
-	1643	4814A 8	GEAR HOUSING ASSEMBLY, CO	1		
1	1643	4814A 9	GEAR HOUSING ASSEMBLY (SI	1		
48		36288	CAM, SHIFT	1		
49		38441	FOLLOWER, CAM	1		
50		20843	SLIDE, CROSS PIN	1		
51	24	39845	SPRING, COMPRESSION - CAM	1		
52	15	38374A 1	SHIM, BEARING CUP TO GEAR	AR		
53	31	38356A 1	TAPERED ROLLER BEARING A	1		
54	31	21739	BEARING, ROLLER - FORWARD	1		
55	43	60247	FORWARD GEAR ASSEMBLY	1		
56	52	47586	RATCHET, SLIDING CLUTCH	1		
57	17	38113	PIN, CROSS - RATCHET TO PR	1		
58	24	38114	SPRING, RETAINING - CROSS F	1		
59	44	55911	SHAFT PROPELLER	1		
60	43	60246	REVERSE GEAR ASSEMBLY	1		
61	15	20927A 1	SHIM, THRUST WASHER TO G	AR		
62	12	32004	WASHER, THRUST - REVERSE	1		
63	30	20839	BEARING, BALL - REVERSE GE	1		
64	25	31986	"O" RING, BEARING CARRIER	1		4
65		55904A 1	BEARING CARRIER ASSEMBLY	1		
66	31	21700	BEARING, ROLLER - BEARING	1		
67	26	56788	OIL SEAL, BEARING CARRIER	1		
68	28	30281	KEY, LOCATING - BEARING CA	1		
69	14	53012	TAB WASHER, GEAR HOUSING	1		
70		53013	COVER, GEAR HOUSING	1		
71		31640A 1	TRIM TAB ASSEMBLY, GEAR H	1		
72	10	55726	SCREW, TRIM TAB TO GEAR H	1		
73	12	45175	WASHER, DRIVE SHAFT HOUSIN	1		
74	11	34863	NUT, DRIVE SHAFT HOUSING TC	1		
75	12	45176	WASHER, DRIVE SHAFT HOUSIN	1		
76	11	34933	NUT, DRIVE SHAFT HOUSING TC	1		
77		62122A 1	THRUST HUB ASSEMBLY, FRON	1		
78	12	62123	WASHER, CUPPED - THRUST H	1		
79		62124A 1	THRUST HUB ASSEMBLY, REAR	1		
80	12	31992	WASHER, CUPPED - THRUST H	1		
81	11	31990	NUT, PROPELLER	1		