



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	332	4796A 3	SWITCH BOX ASSEMBLY, COMPI	1		
2	11	45076	NUT, SWITCH TERMINAL	7		
3	10	24227	SCREW, SWITCH BOX TO FRON	1		
4	10	63506	SCREW, SWITCH BOX TO FRON	3		
5	11	46887	NUT, SWITCH BOX SCREW ATTA	3		
6	54	22875	CLAMP, ELECTRICAL LEADS TO	1		
7	10	31206	SCREW, CLAMP TO SWITCH BO	1		
8		22789	"D" WASHER, CLAMP FASTENIN	1		
9		56318A 5	CABLE ASSEMBLY, COIL TO SWI	1		
10		62351A 1	RECTIFIER ASSEMBLY	1		
11	11	45076	NUT, RECTIFIER TERMINAL	3		
12	10	25764	SCREW, RECTIFIER TO FRONT S	2		
13	50	60315	STARTER MOTOR ASSEMBLY	1		
14		57247	STOP, RUBBER - STARTER MOT	2		
15	84	60872	CABLE, STARTER TO FRONT SU	1		
16	10	29197	SCREW, CABLE TO STARTER M	1		
17	84	60970	CABLE, STARTER SOLENOID TO	1		
18	13	26992	LOCKWASHER, STARTER MOTO	1		
19	11	20890	NUT, STARTER MOTOR TERMIN	1		
20		56703	COLLAR, RUBBER - STARTER MI	2		
21	23	56774	SPACER, COLLAR TO MOUNTINC	AR		
22	87	61053	STARTER SOLENOID	1		
23	10	28063	SCREW, SOLENOID TO FRONT E	1		
24	13	26992	LOCKWASHER, SOLENOID MOUJ	1		
25	10	20776	SCREW, SOLENOID TO FRONT E	1		
26	11	46887	NUT, SOLENOID MOUNTING SCF	1		
27	13	26996	LOCKWASHER, SOLENOID TERN	2		
28	11	20645	NUT, SOLENOID TERMINAL (#10	2		
29	13	26993	LOCKWASHER, SOLENOID TERN	2		
30	11	21908	NUT, SOLENOID TERMINAL (5/11	2		
31	84	61378	CABLE, BATTERY TO STARTER :	1		
32	84	60795	WIRING HARNESS (INTERNAL)	1		
33	10	61160	SCREW, WIRING HARNESS TO F	2		
34	11	46438	NUT, WIRING HARNESS SCREW	2		
35		60114A 1	BRACKET ASSEMBLY, WIRING H	1		
36	26	60925	SEAL, WIRING HARNESS BRAC	1		
37	10	62002	SCREW, WIRING HARNESS BRA	2		
38	25	57806	GROMMET, WIRING HARNESS B	2		
39		47764	STA-STRAP, INTERNAL WIRING	6		
40	336	4592A 1	IGNITION COIL (2 7/8" HIGH)	1	TO IDENTIFY COIL, MEASURE A	
41		56370	PAD, RUBBER - COIL	1	TO IDENTIFY COIL, MEASURE A	