



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	332	4797A 3	HOUSING ASSEMBLY, DISTRIBUTOR	1		
2	12	60569	WASHER, DISTRIBUTOR ADAPT	1		
3		60576	ADAPTOR, DISTRIBUTOR	1	UNITED STATES 3807832 AND I	
3		67304	ADAPTOR, DISTRIBUTOR	1	UNITED STATES 3807833 AND I	
4	17	46912	PIN, DISTRIBUTOR ADAPTOR TC	2		
5	10	69047	SCREW, DISTRIBUTOR ADAPTO	2		
6	11	46793	NUT, DISTRIBUTOR ADAPTOR S	2		
7	22	25094	FITTING, GREASE - DISTRIBUTO	1		
8	84	60871A 3	CABLE ASSEMBLY, ADAPTOR TC	1		
9	12	27939	WASHER, DISTRIBUTOR ADAPT	1		
10	14	27960	TAB WASHER, ADAPTOR CAP FZ	1		
11	13	27959	WASHER, WAVE - DISTRIBUTOR	1		
12		54567	CAP, DISTRIBUTOR HOUSING	1		
13	23	29909	SPACER, DRIVE PULLEY	1		
14		29906A 1	DRIVEN PULLEY ASSEMBLY	1		
15	17	29908	PIN, ROLL - FLANGE LOCATING	1		
16		29907	FLANGE, DRIVEN PULLEY	1		
17	28	29910	KEY, DISTRIBUTOR DRIVER	1		
18	10	68554	SCREW, PULLEY CLAMPING (1/2	1		
19		20140	BELT, TIMING	1		
20		64868	ROD, LINK - SPARK ADVANCE	1		
21		60572	BARREL, NYLON - LINK ROD TO	1		
22		27947	SWIVEL, LINK ROD TO SPARK AI	1		
23		60578	LEVER, THROTTLE CONTROL	1		
24	10	55337	SCREW, THROTTLE CONTROL L	1		
25	23	55164	BUSHING, THROTTLE CONTROL	1		
26	23	55171	BUSHING, THROTTLE CONTROL	1		
27	24	55162	SPRING, RETURN - SPARK ADV	1		
28		60579	LEVER, SPARK ADVANCE	1		
29	12	28008	WASHER, THROTTLE CONTROL	1		
30	10	69003	SCREW, SPARK ADVANCE ADJU	1		
31	11	20645	NUT, SPARK ADVANCE ADJUSTI	1		
32		48039	CAP, SPARK ADJUSTING SCREW	1		
33		39483	LATCH, THROTTLE CONTROL LE	1		
34	10	22486	SCREW, LATCH TO THROTTLE C	1		
35	24	20099	SPRING, COMPRESSION - LATCH	1		
36	11	20586	NUT, LATCH ATTACHING SCREW	1		
37		64869	ROD, LINK - THROTTLE	1	UNITED STATES 3660087 AND I	
38		60575	CAM, NYLON - THROTTLE ACTU	1	UNITED STATES 3660087 AND I	
39		60574	HOUSING, NYLON - THROTTLE	1	UNITED STATES 3660087 AND I	
40		66387	ROD, LINK - THROTTLE	1	UNITED STATES 3660088 AND I	