



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		62351A 1	RECTIFIER ASSEMBLY	1		
2	10	38055	SCREW, RECTIFIER TO PLATE (E	2		
3	13	26996	LOCKWASHER, RECTIFIER SCRE	2		
4	11	45076	NUT, RECTIFIER TERMINAL	3		
5	89	68258	STARTER SOLENOID	1		
6	13	26996	LOCKWASHER, SOLENOID TERM	2		
7	11	68219	NUT, SOLENOID TERMINAL (#10	2		
8	13	26993	LOCKWASHER, SOLENOID TERM	2		
9	11	68292	NUT, SOLENOID TERMINAL (5/11	2		
10		46265	BOOT, TERMINAL-STARTER SOL	1		
11	10	69054	SCREW, SOLENOID TO TOP COV	2		
12	13	26992	WASHER, SOLENOID SCREW	2		
13	50	65436	STARTER MOTOR ASSEMBLY	1		
14		57247	STOP, RUBBER- STARTER MOTI	2		
15	84	60872	CABLE, STARTER TO SOUND AT	1		
16	10	28635	SCREW, CABLE TO STARTER M(1		
17	84	73453	CABLE, SOLENOID TO STARTER	1		
18	13	26992	LOCKWASHER, STARTER MOTO	1		
19	11	20890	NUT, STARTER MOTOR TERMIN	1		
20		56703	COLLAR, RUBBER-STARTER MO	2		
21	23	56774	SPACER, COLLAR TO MOUNTINC	AR		
22	84	73452	CABLE, BATTERY TO STARTER :	1		
23	84	73204	WIRING HARNESS (INTERNAL)	1		
24	10	69560	SCREW, WIRING HARNESS TO F	2		
25	11	46438	NUT, WIRING HARNESS SCREW	2		
26		60114A 1	BRACKET ASSEMBLY, WIRING H	1		
27	26	60925	SEAL, WIRING HARNESS BRAC	1		
28	10	55903	SCREW, WIRING HARNESS BRA	2		