



SEE FIG. 1 FOR PROPELLER  
 SHAFT AND COMPONENT PARTS

Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1643	6038A 9	GEAR HOUSING ASSEMBLY, CO	1	
-	1643	6038A10	GEAR HOUSING ASSEMBLY, CO	1	
1	1643	6038A 6	GEAR HOUSING ASSEMBLY	1	
2	17	21438	PIN, DOWEL-GEAR HOUSING	2	
3	16	33778	STUD, WATER PUMP BODY/	3	
4	16	57933	STUD, GEAR HOUSING TO D	2	
5	31	62091	BEARING, ROLLER-DRIVE SH	1	
6		72849A 1	SCREEN ASSEMBLY, PORT A	1	
6		63850	SCREEN, WATER INTAKE-ST	1	
6		63851	SCREEN, WATER INTAKE-PO	1	
7	10	36070	SCREW, SCREENS TO GEAR	1	
8	11	45812	NUT, SCREEN TO GEAR HOL	1	
9		38071	PLATE, SUPPORT-EXHAUST TI	1	
10		37721	SEAL, EXHAUST TUBE	1	4
11	43	60245	GEAR, PINION-DRIVE SHAFT	1	
12	11	55910	NUT, PINION GEAR TO DRIVE	1	
13	27	32771	GASKET, WATER PUMP BASE	1	4
14	25	26855	"O"RING, WATER PUMP BASE	1	4
15	46	73640A 1	WATER PUMP BASE ASSEMBL	1	
16	26	26782	OIL SEAL, WATER PUMP BAS	1	
17	26	23300	OIL SEAL, WATER PUMP BAS	1	
18	17	35973	DOWEL PIN, WATER PUMP E	2	
19	27	32769	GASKET, LOWER-WATER PUM	1	4
20		54705	PLATE, FACE-WATER PUMP B	1	
21	27	32770	GASKET, UPPER-FACE PLATE	1	4
22	47	65959	IMPELLER, WATER PUMP	1	
23	28	56662	KEY, IMPELLER DRIVE	1	
24	46	48746A 1	WATER PUMP BODY ASSEMBL	1	
25		48753	INSERT, WATER PUMP BOD	1	
26	12	29245	WASHER, WATER PUMP BOD	3	
27	11	36069	NUT, WATER PUMP BODY AN	3	
28	26	38452	SEAL, WATER PUMP BODY TO	1	4
29	12	38453	WASHER, CUPPED-WATER TU	1	
30	25	20273	RING, RUBBER-CENTRIFUGAL	1	4
31	10	28634	SCREW, GREASE FILLER AND	2	
32	12	20260	WASHER, GREASE FILLER AN	2	
35		69787A 1	SHAFT ASSEMBLY, SHIFT-LOW	1	
36	53	29641	CLIP, RETAINING-SHIFT SHAI	1	
37	25	25439	"O"RING, SHIFT SHAFT BUSH	1	4
38	23	55419A 1	BUSHING ASSEMBLY, SHIFT SI	1	
39	26	24590	OIL SEAL, SHIFT SHAFT BUSH	1	