



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	30	20066	BALL BEARING, DISTRIBUTOR H	1			
2	11	54209	NUT, ROTOR SHAFT TO DISTR	1			
3	23	60566	SLEEVE, ROTOR SHAFT	1			
4	332	4797A 3	HOUSING ASSEMBLY, DISTRIBU	1			
5		53417	GROUND STRAP ASSEMBLY, DI	1			
6	10	62568	SCREW, GROUND STRAP ATTACH	1			
7		58807A 1	FLAME ARRESTOR ASSEMBLY, I	1			
8	54	22875	CLAMP, DISTRIBUTOR LEADS TO	1			
9	10	62568	SCREW, DISTRIBUTOR LEAD CL	1			
10		22789	"D" WASHER, CLIP SCREW	1			
11	54	22875	CLIP, DISTRIBUTOR LEADS TO F	1			
12	10	30663	SCREW, DISTRIBUTOR LEAD CL	1			
13		22789	"D" WASHER, CLIP SCREW	1			
14	15	21148A 1	SHIM, BEARING TO SPACER	1			
15	30	26379	BALL BEARING, DISTRIBUTOR H	1			
16	15	55853	SHIM, BEARING TO DISTRIBUTO	AR			
17	23	53538	SPACER, ROTOR SHAFT	1			
18	53	26406	RING, RETAINING - BALL BEARIN	1			
19	332	4801	DISC, ROTOR	1			
20	337	4603	ROTOR, DISTRIBUTOR	1			
21	54	60768	CLAMP, DISTRIBUTOR CAP TO C	1			
22	10	65774	SCREW, DISTRIBUTOR CAP CLA	1			
23	11	26768	NUT, DISTRIBUTOR CAP CLAMP	1			
24	27	55896	GASKET, DISTRIBUTOR CAP TO	1		2,3,4	
25	393	4606A 2	DISTRIBUTOR CAP ASSEMBLY	1			
26	393	1293A 1	BRUSH AND SPRING ASSEMBL	1			
27		58807A 1	FLAME ARRESTOR ASSEMBLY, I	1			
28	84	63212A 2	SPARK PLUG LEAD ASSEMBLY #	3			
--		20121	CONNECTOR, SPARK PLUG LE	3			
29		60096	SLEEVE, SPARK PLUG LEAD TO	3			
30	25	26547	GROMMET, SPARK PLUG LEAD	3			
31		63319	RETAINER, HIGH TENSION LEAC	1			
32		62877	RETAINER, HIGH TENSION LEAC	1			
33	10	28638	SCREW, HIGH TENSION LEAD R	1			
34	33	57451	SPARK PLUG (AC#V40FFM)	3			
35	85	71006A 1	PROTECTOR, SPARK PLUG LEA	3			
36	23	57459	SLEEVE, SPARK PLUG LEAD (LE	1		ORDER A-36549A1 KIT FOR REF	
37	84	60870A 4	HIGH TENSION CABLE ASSEMBL	1			
38	332	2854	BOOT, HIGH TENSION CABLE	1			
39	25	26547	GROMMET, HIGH TENSION LE	1			
40	25	26547	GROMMET, HIGH TENSION LE	1			