



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	332	4796A 3	SWITCH BOX ASSEMBLY, COMPI	1	UNITED STATES 3807832 AND I	
1	332	4796A 6	SWITCH BOX ASSEMBLY, COMPI	1	UNITED STATES 3807833 AND I	
2	11	45076	NUT, SWITCH TERMINAL	7		
3	10	64022	SCREW, SWITCH BOX TO FRON	1		
4	10	63506	SCREW, SWITCH BOX TO FRON	3		
5	11	46887	NUT, SWITCH BOX SCREW ATT	3		
6	54	22627	CLAMP, ELECTRICAL LEADS TO S	1		
7	10	69079	SCREW, CLAMP TO SWITCH BO	1		
8		22789	"D" WASHER, CLAMP FASTENIN	1		
9		56318A 5	CABLE ASSEMBLY, COIL TO SWI	1		
10		62351A 1	RECTIFIER ASSEMBLY	1		
11	11	45076	NUT, RECTIFIER TERMINAL	4		
12	10	37571	SCREW, RECTIFIER TO FRONT S	2		
13	50	63015	STARTER MOTOR ASSEMBLY	1	UNITED STATES 3660087 AND I	
13	50	65436	STARTER MOTOR ASSEMBLY	1	UNITED STATES 3660088 AND I	
14		57247	STOP, RUBBER - STARTER MOT	2		
15	84	60872	CABLE, STARTER TO FRONT SU	1		
16	10	28635	SCREW, CABLE TO STARTER M	1		
17	84	60970	CABLE, SOLENOID TO STARTER	1	UNITED STATES 4042111 AND I	
17	84	68890	CABLE, SOLENOID TO STARTER	1	UNITED STATES 4042112 AND I	
18	13	26992	LOCKWASHER, STARTER MOTO	1		
19	11	20890	NUT, STARTER MOTOR TERMIN	1		
20		56703	COLLAR, RUBBER - STARTER MI	2		
21	23	56774	SPACER, COLLAR TO MOUNTINC	AP		
22	87	61053	STARTER SOLENOID	1		
23	10	69054	SCREW, SOLENOID TO FRONT S	1		
24	13	26992	LOCKWASHER, SOLENOID MOUI	1		
25	10	69052	SCREW, SOLENOID TO FRONT S	1		
26	11	46887	NUT, SOLENOID MOUNTING SCF	1		
27	13	26996	LOCKWASHER, SOLENOID TERM	2		
28	11	20645	NUT, SOLENOID TERMINAL (#10	2		
29	13	26993	LOCKWASHER, SOLENOID TERM	2		
30	11	21908	NUT, SOLENOID TERMINAL (5/1)	2		
30A		46265	BOOT, STARTER SOLENOID TEF	1		
31	84	61378	CABLE, BATTERY TO STARTER	1		
32	84	60795	WIRING HARNESS (INTERNAL)	1		
33	10	69560	SCREW, WIRING HARNESS TO F	2		
34	11	46438	NUT, WIRING HARNESS SCREW	2		
35		60114A 1	BRACKET ASSEMBLY, WIRING H	1		
36	26	60925	SEAL, WIRING HARNESS BRAC	1		
37	10	69082	SCREW, WIRING HARNESS BRA	2		