



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	11	52901	NUT, FLYWHEEL	1			
2	12	68229	WASHER, FLYWHEEL NUT	1			
3	19	45907	PLUG, FLYWHEEL PULLER THRE	1			
4	248	5977A 7	FLYWHEEL ASSEMBLY	1			
5	10	68997	SCREW, PLATE/HUB TO FLEXI	8			
6	10	32417	SCREW, FLEXIBLE PLATE TO F	8			
7		73627	PLATE, SWITCH	1			
8	25	57009	GROMMET, SWITCH BOX PLATE	3			
9	10	59645	SCREW, SWITCH BOX PLATE TC	3			
10	12	56720	WASHER, SWITCH BOX PLATE E	3			
11	332	5524A 1	SWITCH BOX ASSEMBLY	1			
12	10	26251	SCREW, SWITCH BOX TO PLATE	2			
13		46933A 6	WIRE ASSEMBLY, SWITCH BOX	2			
14	11	45076	NUT, SWITCH BOX TERMINAL	10			
15	84	60443A 3	WIRE ASSEMBLY, SWITCH BOX	1			
15	84	62822A 1	WIRE ASSEMBLY, SWITCH BOX	1			
15	84	68896A 1	WIRE ASSEMBLY, SWITCH BOX	1			
16	84	60466A17	WIRE ASSEMBLY, SWITCH BOX	3			
17		73439	PLATE, MOUNTING-IGNITION CO	1			
18	339	5748A 2	IGNITION COIL ASSEMBLY	3			
19	11	45076	NUT, IGNITION COIL TERMINAL	6			
20		73218	COVER, IGNITION COIL	1			
21	10	66944	SCREW, COVER TO MOUNTING	6			
22	398	5704A 2	STATOR ASSEMBLY	1			
23	10	63136	SCREW, STATOR TO UPPER EN	4			
24		68162A 3	TRIGGER PLATE ASSEMBLY	1			
25	54	28700	CLAMP, STATOR LEADS ATTACH	1			
26	10	20031	SCREW, CLAMP TO CRANKCASE	1			
27	84	73451A 8	WIRE ASSEMBLY, SPARK PLUG	3			
28	332	2854	BOOT, IGNITION COIL END	3			
29	33	57451	SPARK PLUG (AC#V40FFM)	3			
30	15	74049	SHIM, STATOR	AR			