



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1		58908	BRACKET, ANCHOR-CONTROL C	1		
2		60283A	LINK ASSEMBLY, SHIFT SHAFT A	1		
3	24	20099	SPRING, LINK TO ANCHOR BRAC	1		
4		37896	GUIDE BLOCK, LINK	1		
5		52100	WEAR PLATE, NYLON-LINK	1		
6		38279	LATCH, LINK TO ANCHOR BRAC	1		
7	12	21631	WASHER, LINK LATCH	1		
8	11	20664	NUT, LINK ATTACHING	2		
9		75007A	SHIFT SHAFT ASSEMBLY, UPPEF	1		
9		75008A	SHIFT SHAFT ASSEMBLY, UPPEF	1		
11	13	29720	WASHER, WAVE-SHIFT SHAFT T	1		
12	23	26600	BUSHING, NYLON-SHIFT SHAFT	1		
13	12	24664	WASHER, LINK (SHIFT SHAFT EP	1		
14		39519	CUP, RETAINER-ANCHOR BRAC	1		
15		39618	LEVER, NYLON-SHIFT CABLE LO	1		
16	17	47175	PIN, LOCKING LEVER AND COVE	3		
17		65799	LINK, LOCKING LEVER TO COVE	1		
18		39667	COVER, NYLON-SHIFT CABLE	1		
19	10	69101	SCREW, ANCHOR BRACKET TO	3		
20	27	60317	GASKET, POWERHEAD TO EXHA	1		4
21		73712A	EXHAUST PLATE ASSEMBLY	1		
21A	23	27132	BUSHING, NYLON-EXHAUST PI	1		
22	16	69058	STUD, EXHAUST PLATE TO DF	1		
23	16	68166	STUD, EXHAUST PLATE TO DF	1		
24		73156	SEAL, WATER INLET TUBE	1		4
25	12	38453	WASHER, NYLON-WATER INLE	1		
26		38500	RETAINER, WATER INLET TUE	1		
27	10	69069	SCREW, RETAINER TO EXHAU	1		
28		60307	SEAL, EXHAUST PLATE	1		
29		60306	STRIP, RETAINING-EXHAUST F	1		
30	10	62568	SCREW, RETAINING STRIP TO	4		
31		63007	MOUNT, RUBBER-EXHAUST PLA	1		
32		49651A	GROUND STRAP ASSY, EXHAU	1		
33	12	20346	WASHER, RUBBER MOUNT ATT.	2		
34	11	20361	NUT, RUBBER MOUNT TO EXHA	2		
35	10	37562	SCREW, EXHAUST PLATE PLATE	3		
36	27	38501	GASKET, ADAPTOR PLATE TO D	1		4
37		58911	EXHAUST TUBE, ADAPTOR	1		
38	27	60280	GASKET, EXHAUST TUBE TO EX	1		4
39	10	28636	SCREW, EXHAUST TUBE TO EX	3		