



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		62973A 4	FUEL PUMP ASSEMBLY	1	
2	21	30430A 3	CHECK VALVE ASSEMBLY	2	
3		55278A 1	DIAPHRAGM KIT	1	2,4
4			GASKET, CHECK VALVE TO	2	2,4
5			GASKET, FUEL PUMP	2	2,4
6		23004	RETAINER, CHECK VALVE	1	
7	10	20037	SCREW, RETAINER TO HOUSI	2	
8	10	35581	SCREW, PUMP MOUNTING (1 5/	3	
9	22	32802	PLUG, PIPE - FUEL PUMP	1	
10	32	71121	HOSE ASSEMBLY, FUEL PUMP T	1	
11	32	71121	HOSE ASSEMBLY, FUEL PUMP A	1	
12	54	20386	CLAMP, HOSE TO FUEL PUMP AT	4	
13	54	47483	CLAMP, TELL TALE HOSE TO EX	2	
14	22	25885	ELBOW, HOSE TO EXHAUST PL	1	
15		52889	NOZZLE, TELL TALE - REAR SUF	1	
16	10	30663	SCREW, NOZZLE TO REAR SUPI	1	
17	21	65424A 1	FUEL LINE ASSEMBLY, FUEL PUI	1	
18		58907	HOUSING, FUEL FILTER AND CO	1	
19	10	37558	SCREW, FILTER HOUSING TO TI	2	
20	12	34437	WASHER, FUEL FILTER HOUSI	2	
21	27	25851	GASKET, FILTER COVER (BOTTC	1	2,4
22	1399	3938	ELEMENT, FUEL FILTER	1	
23	27	25849	GASKET, FILTER COVER (TOP)	1	2,4
24	1399	4791	COVER, FUEL FILTER	1	
25	10	25822	SCREW, FILTER COVER FASTEN	1	
26	27	25848	GASKET, FILTER COVER FASTEN	1	2,4
27	32	65423	FUEL LINE, FILTER COVER TO U	1	
28	22	29085	ELBOW, (45 DEGREE) - UPPER C	1	
29	22	36567	ELBOW, LOWER CARBURETOR	1	
30	32	62989A 1	FUEL LINE, FILTER COVER TO LI	1	
31	32	64347	FUEL LINE ASSEMBLY, FUEL PUI	1	
32	22	30177	NUT, FUEL LINE	2	
33	22	30175	SLEEVE, FUEL LINE	2	
34	22	30468	CONNECTOR, FUEL LINE	2	
35		30186	ADAPTOR, CHECK UNIT (FUEL LI	1	
36		30187	STEM, CHECK UNIT ADAPTOR	1	
37	25	20415	"O" RING, ADAPTOR STEM	1	2,4
38	24	30189	SPRING, ADAPTOR STEM	1	
39		30188	CUP WASHER, ADAPTOR	1	
40	10	24644	SCREW, ADAPTOR TO FRONT S	2	
41	11	46887	NUT, ADAPTOR FASTENING SCE	2	