



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2142	4538A 4	COWL ASSEMBLY, (STARBOARD)	1		
2	26	60297	SEAL, FUEL CONNECTOR - COW	1		
3		61634	BLANKET, SOUND ABSORBING	1		
4		61633	BLANKET, SOUND ABSORBING	1		
5	2141	4537A 4	COWL ASSEMBLY (PORT)	1		
6	26	60298	SEAL, CONTROL CABLES - COW	1		
7		61631	BLANKET, SOUND ABSORBING	1		
8		61632	BLANKET, SOUND ABSORBING	1		
9		61661	SEAL, RUBBER - COWL	2	UNITED STATES 4042111 AND I	
9A		61661	SEAL, RUBBER - COWL	2	UNITED STATES 4136684 AND I	
10		61662	SEAL, RUBBER - COWL	2	UNITED STATES 4136684 AND I	
11		60121	BRACKET, COWL SEALING - REA	1	UNITED STATES 4042111 AND I	
11		69566	BRACKET, COWL SEALING - REA	1	UNITED STATES 4042112 AND I	
11A		69876 1	SEAL< REAR BRACKET	2	UNITED STATES 4136685 AND I	
12		69568	BRACKET, COWL HINGE	2		
13	10	45561	SCREW, HINGE BRACKET TO CC	4		
14	13	26992	LOCKWASHER, HINGE BRACKET	4		
15	12	37998	WASHER, HINGE BRACKER SCR	4		
16	17	60301	PIN, COWL HINGE	4		
17	10	28782	SCREW, PIN TO COWL (7/8")	4		
18	13	26993	LOCKWASHER, PIN ATTACHING	4		
19		46785A 2	COWL LATCH ASSEMBLY	2		
20		62628	BARREL, COWL LATCH	2		
21	10	31312	SCREW, LATCH ASSEMBLY TO E	2		
22		62627	BAR, ADJUSTMENT - COWL LATI	2		
23		62629	BARREL, COWL LATCH	2		
24	24	62624	SPRING, TENSION - COWL LATC	2		
25	12	30164	WASHER, ADJUSTMENT BAR TC	2		
26	11	45812	NUT, ADJUSTMENT BAR TO BAF	2		
27	2143	4552A 2	COWL FRONT COVER ASSEMBL'	1	UNITED STATES 4136684 AND I	
27	2143	5689A 2	COWL FRONT COVER ASSEMBL'	1	UNITED STATES 4136685 AND I	
28		61663	BLANKET, SOUND ABSORBING	1		
29		61158	HOOK, COWL FRONT COVER F	1		
30	10	69570	SCREW, FASTENING HOOK TO	1		
31		47341A 1	STARTER ROPE ASSEMBLY (FO	1		