



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	30	20066	BALL BEARING, DISTRIBUTOR H	1	
2	11	54209	NUT, ROTOR SHAFT TO DISTR	1	
3	23	60566	SLEEVE, ROTOR SHAFT	1	
4	332	4797A 3	HOUSING ASSEMBLY, DISTRIBU	1	
5		53417	GROUND STRAP ASSEMBLY, DI	1	
6	10	62568	SCREW, GROUND STRAP ATTACH	1	
7		58807A 1	FLAME ARRESTOR ASSEMBLY, I	1	
8	54	22875	CLAMP, DISTRIBUTOR LEADS TO	1	
9	10	62568	SCREW, DISTRIBUTOR LEAD CL	1	
10		22789	"D" WASHER, CLIP SCREW	1	
11	54	22875	CLIP, DISTRIBUTOR LEADS TO F	1	
12	10	30663	SCREW, DISTRIBUTOR LEAD CL	1	
13		22789	"D" WASHER, CLIP SCREW	1	
14	15	21148A 1	SHIM, BEARING TO SPACER	1	
15	30	26379	BALL BEARING, DISTRIBUTOR H	1	
16	15	55853	SHIM, BEARING TO DISTRIBUTO	AR	
17	23	53538	SPACER, ROTOR SHAFT	1	
18	53	26406	RING, RETAINING - BALL BEARIN	1	
19	332	4801	DISC, ROTOR	1	
20	337	4603	ROTOR, DISTRIBUTOR	1	
21	54	60768	CLAMP, DISTRIBUTOR CAP TO C	1	
22	10	65774	SCREW, DISTRIBUTOR CAP CLA	1	
23	11	26768	NUT, DISTRIBUTOR CAP CLAMP	1	
24	27	55896	GASKET, DISTRIBUTOR CAP TO	1	2,3,4
25	393	4606A 2	DISTRIBUTOR CAP ASSEMBLY	1	
26	393	1293A 1	BRUSH AND SPRING ASSEMBL	1	
27		58807A 1	FLAME ARRESTOR ASSEMBLY, I	1	
28	84	63212A 2	SPARK PLUG LEAD ASSEMBLY #	3	
--		20121	CONNECTOR, SPARK PLUG LE	3	
29		60096	SLEEVE, SPARK PLUG LEAD TO	3	
30	25	26547	GROMMET, SPARK PLUG LEAD	3	
31		63319	RETAINER, HIGH TENSION LEAC	1	
32		62877	RETAINER, HIGH TENSION LEAC	1	
33	10	28638	SCREW, HIGH TENSION LEAD R	1	
34	33	57451	SPARK PLUG (AC#V40FFM)	3	
35	85	71006A 1	PROTECTOR, SPARK PLUG LEA	3	
36	23	57459	SLEEVE, SPARK PLUG LEAD (LE	1	ORDER A-36549A1 KIT FOR REF
37	84	60870A 4	HIGH TENSION CABLE ASSEMBL	1	
38	332	2854	BOOT, HIGH TENSION CABLE	1	
39	25	26547	GROMMET, HIGH TENSION LE	1	
40	25	26547	GROMMET, HIGH TENSION LE	1	