



SEE PAGE 3 FOR DRIVE SHAFT  
 AND COMPONENT PARTS

Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1643	6038A 9	GEAR HOUSING ASSEMBLY, CO	1	
-1	1643	6038A10	GEAR HOUSING ASSEMBLY, CO	1	
1	1643	6038A 6	GEAR HOUSING ASSEMBLY (SI	1	
50		69792	CAM SHIFT	1	
51		38441	FOLLOWER, CAM	1	
52		20843	SLIDE, CROSS PIN	1	
53	24	39845	SPRING, COMPRESSION-CAM F	1	
54	15	38374A 1	SHIM, BEARING CUP TO GEAR	AR	
55	31	38356A 1	TAPERED ROLLER BEARING A	1	
56	31	21739	BEARING, ROLLER-FORWARD G	1	
57	43	60247	FORWARD GEAR ASSEMBLY	1	
57	43	60247	FORWARD GEAR ASSEMBLY	1	
58	52	47586	RATCHET, SLIDING CLUTCH	1	
59	17	38113	PIN, CROSS-RATCHET TO PRO	1	
60	24	38114	SPRING, RETAINING-CROSS PI	1	
61	44	55911	SHAFT, PROPELLER	1	
62	43	66555	REVERSE GEAR ASSEMBLY	1	
63	15	20927A 1	SHIM, THRUST WASHER TO G	AR	
64	12	32004	WASHER, THRUST-REVERSE	1	
65	30	20839	BEARING, BALL-REVERSE GEA	1	
66	25	31986	"O"RING, BEARING CARRIER	1	4
67		69386A 1	BEARING CARRIER ASSEMBLY	1	
68	31	21700	BEARING, ROLLER-BEARING	1	
69	26	69188	OIL SEAL, BEARING CARRIEF	1	
70	26	69189	OIL SEAL, BEARING CARRIEF	1	
71	28	30281	KEY, LOCATING-BEARING CAR	1	
72	14	53012	TAB WASHER, GEAR HOUSING	1	
73		53013	COVER, GEAR HOUSING	1	
74		31640A 1	TRIM TAB ASSEMBLY, GEAR H	1	
75	10	66024	SCREW, TRIM TAB TO GEAR H	1	
76	12	45175	WASHER, DRIVE SHAFT HOUSIN	1	
77	11	34863	NUT, DRIVE SHAFT HOUSING TC	1	
78	12	65791	WASHER, DRIVE SHAFT HOUSIN	1	
79	11	34933	NUT, DRIVE SHAFT HOUSING TC	1	
80		65758	THRUST HUB, PROPELLER	1	
81		62124A 1	THRUST HUB ASSEMBLY, REAR	1	
82	12	31992	WASHER, CUPPED-THRUST H	1	
83	11	69578	NUT, PROPELLER	1	