



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2115	2458	COWL, BOTTOM	1,1		
2		37415A 1	TRIM MOULDING ASSEMBLY, BC	1,1		
3		38046	SPLICER, TRIM MOULDING	1,1		
4	10	29226	SCREW, DECORATIVE - MOU	5,5		
5	12	24671	WASHER, FIBER-MOULDING	2,2		
6	11	29225	NUT, NYLON CAP - MOULDIN	2,2		
7	13	26995	LOCKWASHER, MOULDING FA	3,3		
8	11	26419	NUT, BRASS - MOULDING FA	3,3		
9		37920A 1	COVER PLATE ASSEMBLY, BOTI	1,1		
10		37940	PAD, SOUND -COVER PLATE	1,1		
11	10	30009	SCREW, COVER PLATE TO BOTI	4,4		
12		37638	BOOT, CONTROL CABLES - BOTI	1,1		
13		23760	BAFFLE, BOTTOM COWL	1,1		
14	10	21106	SCREW, BAFFLE TO BOTTOM CC	3,3		
15		37637	BOOT, FUEL CONNECTOR - BOT	1,1		
16	32	26407	HOSE, TELL TALE - EXHAUST C	1,1		
17	10	37561	SCREW, WIRING HARNESS SUP	2,2		
18	11	20184	NUT, WIRING HARNESS SUPPOI	2,2		
19	32	26407	HOSE, TELL TALE-EXHAUST COV	1,1		
20	22	29111	CONNECTOR, TELL TALE HOSE	1,1		
21	22	25885	ELBOW, TELL TALE HOSE TO EX	1,1		
22	54	22976	CLAMP, TELL TALE HOSE TO CO	2,2		
23	27	37437	GASKET, POWERHEAD TO EXHA	1,1		4
24		38468A 4	PLATE ASSEMBLY, EXHAUST EX	1,1		
25	12	36446	WASHER, NYLON - WATER INLE	1,1	SERIAL 00000000-02014592	
26	26	36557	SEAL, RUBBER-WATER INLET TI	1,1	SERIAL 00000000-02014592	
26	26	38970	SEAL, RUBBER-WATER INLE	1,1	SERIAL 02014593-09999999	4
27		38448	RETAINER, WATER TUBE SEAL	1,1	SERIAL 01803379-09999999	
28	10	34439	SCREW, RETAINER TO EXTE	1,1	SERIAL 01803379-09999999	
29	10	22421	SCREW, EXTENSION PLATE TO	1,1	SERIAL 01803379-09999999	
30	11	20184	NUT, EXHAUST EXTENSION PLA	1,1	SERIAL 01803379-09999999	
31	27	38471	GASKET, EXHAUST EXTENSION	1,1		4
32		37918	SEAL, EXHAUST EXTENSION PL	1,1		
33		38032	STRIP, RETAINING-EXHAUST EX	1,1		
34	10	37571	SCREW, SEAL AND STRIP TO EX	5,5		
35		37824	BRACKET, SHIFT SHAFT HOLD C	1,1		
36	10	30009	SCREW, HOLD DOWN BRACKKE	1,1		
37		37430A 1	SHIFT SHAFT ASSEMBLY, UPPE	1,1		
37		37431A 1	SHIFT SHAFT ASSEMBLY, UPPE	1,1		
38		37899	LINK ROD, SHIFT	1,1		
39	12	28720	WASHER, WAVE LINK ROD	2,2		