



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	3002	NUT, FLYWHEEL	1,1		
2	12	33001	WASHER, FLYWHEEL NUT	1,1		
3	28	30250	KEY, FLYWHEEL DRIVE	1,1		
4	216	2094A 2	FLYWHEEL ASSEMBLY, COMPLE	1,1		
5	10	32156	SCREW, FLEXIBLE PLATE TO F	8,8		
6	50	33000A 1	RATCHET ASSEMBLY	1,1		
7	10	32417	SCREW, RATCHET TO FLYW	8,8		
8	17	26618	PIN, DOWEL - PULLEY LOCATI	1,1		
9		29788	FLANGE, FLYWHEEL PULLEY	1,1		
10		30306	PULLEY, FLYWHEEL	1,1		
11		29787	HUB, FLYWHEEL PULLEY	1,1		
12	398	2171	STATOR, ALTERNATOR	1,1		
13		30050	TERMINAL, STATOR LEAD WIF	2,2		
14	10	32614	SCREW, STATOR TO UPPER EN	4,4		
15	54	26550	CLIP, STATOR LEAD TO CRANKC	1,1		
16		22789	"D" WASHER, CLIP FASTENING	1,1		
17	10	26548	SCREW, STATOR LEAD CLIP TO	1,1		
18	54	22783	"S" CLIP, STATOR LEAD TO BOT	3,3		