



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	2022A 5	GEAR HOUSING ASSEMBLY, CO	1,1	1623-2022A5 GEAR HOUSING A:	
1	1623	2022A 1	GEAR HOUSING ASSEMBLY (SI	1,1		
50		30147	CAM, SHIFT	1,1		
51		30625	FOLLOWER, CAM	1,1		
52		30624	SLIDE, CROSS PIN	1,1		
53	24	30622	SPRING, COMPRESSION - CAM	1,1		
54	15	30923A 1	SHIM, BEARING OUTER RACE	AR,AR		
55	43	31886	FORWARD GEAR ASSEMBLY	1,1		
56	31	30895	BEARING, ROLLER - FORWAR	1,1		
57	31	30894A 1	TAPERED ROLLER BEARING	1,1		
58	31	31092	CUP, TAPERED ROLLER BE	1,1		
59		34239	RATCHET, SLIDING CLUTCH	1,1		
60	17	30632	PIN, CROSS - RATCHET TO PR	1,1		
61	24	30893	SPRING, RETAINING - CROSS F	1,1		
62	44	30944	SHAFT, PROPELLER	1,1		
--	43	31887A 1	REVERSE GEAR ASSEMBLY, C	1,1		
63	43	31887	REVERSE GEAR ASSEMBLY	1,1		
64	30	31265	BEARING, BALL - REVERSE G	1,1		
65	12	30633	WASHER, THRUST - BEARIN	1,1		
66	15	29955A 1	SHIM, THRUST WASHER TO C	AR,AR		
67	25	29976	"O" RING, BEARING CARRIER	1,1		
68		31284A 1	BEARING CARRIER ASSEMBLY	1,1		
69	31	30956	BEARING, ROLLER - BEARIN	1,1		
70	26	30550	OIL SEAL, BEARING CARRIER	2,2		
71	28	30281	KEY, LOCATING - BEARING CA	1,1		
72	12	29957	WASHER, GEAR HOUSING COV	1,1		
73		31037	COVER, GEAR HOUSING	1,1		
74	12	31013	WASHER, THRUST - BEARING C	1,1		
75		30581A 1	THRUST HUB AND WASHER AS:	1,1		
76	12	29590	WASHER, CUPPED - THRUST	1,1		
77	12	31211	WASHER, SPLINED - PROPELLE	1,1		
78	14	31210	TAB WASHER, PROPELLER NUT	1,1		
79	11	29594	NUT, PROPELLER	1,1		
80		31640	TRIM TAB, GEAR HOUSING	1,1		
81	10	32470	SCREW, TRIM TAB TO GEAR HO	1,1		
82	10	30206	SCREW, GEAR HOUSING TO DR	1,1		