



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1	1128	1890A 1	END CAP ASSEMBLY, UPPER	1,1		
2	26	29476	OIL SEAL	1,1		
3	25	31305	"O" RING	1,1		
4	30	32117	BALL BEARING	1,1		
5	15	31283A 1	SHIM, UPPER END CAP TO CRANKCASE	AR,AR		
6	10	30225	SCREW, UPPER END CAP MOUNTING	4,4		
7	834	2412A 3	CYLINDER BLOCK AND CRANKCASE	1,1		
8	23	26348	BUSHING, CRANKCASE - COWLING	2,2		
9	17	20032	DOWEL PIN, CYLINDER BLOCK	2,2		
10	17	20033	DOWEL PIN, CRANKCASE TO CYLINDER BLOCK	2,2		
11	22	30139	PLUG, PIPE - WATER PRESSURE	1,1		
12	16	21831	STUD, CARBURETOR MOUNTING	4,4		
13	16	26133	STUD, CRANKCASE TO DRIVE SHAFT	2,2		
14	16	26134	STUD, CYLINDER BLOCK TO DRIVE SHAFT	2,2		
15	16	26135	STUD, CYLINDER BLOCK TO DRIVE SHAFT	4,4		
16		33548	EXTENSION, EXHAUST - CYLINDER BLOCK	1,1	N.L.A.-ORDER 36066A1 KIT	
16		36066	EXTENSION, EXHAUST - CYLINDER BLOCK	1,1		
--	27	36059	GASKET, EXHAUST EXTENSION	1,1		
--	13	26993	LOCKWASHER, EXHAUST EXTENSION	4		
17	10	25299	SCREW, EXHAUST EXTENSION	4		
17	10	29282	SCREW, EXHAUST EXTENSION	4,4		
18	10	26132	SCREW, CRANKCASE TO CYLINDER BLOCK	2,2		
18	10	32293	SCREW, CRANKCASE TO CYLINDER BLOCK	13,13		
18	10	33860	SCREW, CRANKCASE TO CYLINDER BLOCK	1,1		
19	10	33008	SCREW, CRANKCASE TO CYLINDER BLOCK	2,2		
--	12	20084	WASHER, GROUND STRAP AND	1,1		
20	11	29250	NUT, CRANKCASE TO CYLINDER BLOCK	18,18		
21	10	33853	SCREW, MAIN BEARING LOCKIN	2,2		
22	14	20091	TAB WASHER, BEARING LOCKIN	3,3		
23	10	20359	SCREW, CENTER MAIN BEARING	1,1		
24	1126	1751A 1	END CAP ASSEMBLY, LOWER	1,1		
25	21	28481A 1	CHECK VALVE ASSEMBLY, ENCLOSURE	1,1		
26	26	29478	OIL SEAL, LOWER	1,1		
27	26	29476	OIL SEAL, UPPER	1,1		
28	25	20081	"O" RING	1,1		
29	30	20080	BALL BEARING	1,1		
30	15	20085A 1	SHIM, LOWER END CAP TO CRANKCASE	AR,AR		
31	10	30225	SCREW, LOWER END CAP MOUNTING	3,3		
32	32	33729	TUBE, BALANCE - MAIN BEARING	1,1		
33	22	25885	ELBOW, BALANCE TUBE TO MAIN BEARING	2,2		
34	54	20285	CLAMP, BALANCE TUBE TO FLUID	2,2		