



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	2022A 5	GEAR HOUSING ASSEMBLY, COM	1,1	1623-2022A5 GEAR HOUSING A:	
1	1623	2022A 1	GEAR HOUSING ASSEMBLY	1,1		
2	16	30661	STUD, GEAR HOUSING TO D	1,1		
3	16	29078	STUD, GEAR HOUSING TO D	2,2		
4	16	30669	STUD, WATER PUMP BASE A	1,1		
5	16	30667	STUD, WATER PUMP BASE A	2,2		
6	31	29982	BEARING, ROLLER - DRIVE S	1,1		
7	45	30565	DRIVE SHAFT (STANDARD)	1,1		
8	43	31419	GEAR, PINION - DRIVE SHAFT	1,1		
9	11	30932	NUT, PINION GEAR TO DRIVE :	1,1		
10	15	30278A 1	SHIM, DRIVE SHAFT BALL BEA	AR,AR		
11	30	20464	BEARING, BALL - DRIVE SHAFT	1,1		
12	53	30726	RING, RETAINING - BALL BEAR	1,1		
13	27	32438	GASKET, WATER PUMP BASE	1,1		
14	25	30224	"O" RING, WATER PUMP BASE	1,1		
15	46	32436A 1	WATER PUMP ASSEMBLY	1,1		
16	26	31489	OIL SEAL, WATER PUMP BAS	1,1		
17	17	29596	DOWEL PIN, WATER PUMP E	2,2		
18	27	32433	GASKET, LOWER - WATER PUI	1,1		
19		32435	PLATE, FACE - WATER PUMP E	1,1		
20	27	32434	GASKET, UPPER - FACE PLATE	1,1		
21	46	32437A 1	WATER PUMP BODY ASSEMBL	1,1		
22		30915	INSERT, WATER PUMP BOD	1,1		
23	26	31507	OIL SEAL, WATER PUMP BOD	1,1		
24	47	30221	IMPELLER, WATER PUMP	1,1		
25	17	29967	PIN, IMPELLER DRIVE	1,1		
26	10	30720	SCREW, WATER PUMP BODY	1,1		
27	13	26992	LOCKWASHER, WATER PUMP	3,3		
28	11	29598	NUT, WATER PUMP BODY FAS	2,2		
29	13	26993	LOCKWASHER, WATER PUMP	1,1		
30	111	28770	NUT, WATER PUMP BODY FAS	1,1		
31	25	30271	RING, RUBBER - CENTRIFUGAI	1,1		
32	26	29677	SEAL, RUBBER - WATER PUMF	1,1		
33	23	29804	SLEEVE, GUIDE - WATER INLE	1,1		
34	25	30613	"O" RING, UPPER - DRIVE SHA	1,1		
35		25136	SHAFT, SHIFT - LOWER	1,1		
36	18	20233	CLIP, RETAINING - SHIFT SHAF	1,1		
37	25	25439	"O" RING, SHIFT SHAFT BUSHI	1,1		
38	23	30617A 1	BUSHING ASSEMBLY, SHIFT SI	1,1		
39	26	31249	OIL SEAL, SHIFT SHAFT BUSI	1,1		
40	12	21266	WASHER, RUBBER - SHIFT SH	1,1		