



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		30269A 2	FUEL PUMP ASSEMBLY-UPPER	1,1		
2	27	23005	GASKET, CHECK VALVE TO HO	2,2		4
3	21	30430	VALVE, CHECK-FUEL PUMP	2,2		
4		23004	RETAINER, CHUCK VALVE	1,1		
5	10	20037	SCREW, RETAINER TO HOUSII	2,2		
6	27	24863	GASKET, FUEL PUMP	2,2		4
7		23014	DIAPHRAGM, FUEL PUMP	1,1		4
8		30461A 2	FUEL PUMP ASSEMBLY-LOWER	1,1		
2	27	23005	GASKET, CHECK VALVE TO HO	2,2		4
3	21	30430	VALVE, CHECK-FUEL PUMP	2,2		
4		23004	RETAINER, CHECK VALVE	1,1		
5	10	20037	SCREW, RETAINER TO HOUSII	2,2		
6	27	24863	GASKET, FUEL PUMP	2,2		4
7		23014	DIAPHRAGM, FUEL PUMP	1,1		4
9		30275	COVER, FUEL PUMP	2,2		
10	27	30276	GASKET, FUEL PUMP COVER	2,2		4
11	10	29878	SCREW, PUMP MOUNTING (1 1/	1,1		
12	10	30274	SCREW, PUMP MOUNTING (1 3/4	2,2		
13	10	38036	SCREW, PUMP MOUNTING (1 1/	1,1		
14	10	30273	SCREW, PUMP MOUNTING (1 7/	2,2		
15	32	33154A 1	FUEL LINE ASSY, PUMP TO CAR	1,1		
16	22	29085	ELBOW (45 ),UPPER CARBURETI	1,1		
17	22	30174	ELBOW, UPPER FUEL PUMP OU	1,1		
18	22	30175	SLEEVE, FUEL PUMP OUTLET EL	1,1		
19	22	30177	NUT, FUEL PUMP OUTLET ELBO	1,1		
20	32	31552A 1	FUEL LINE ASSY, PUMP TO PUM	1,1		
21	32	31553A 1	FUEL LINE ASSY, PUMP TO CAR	1,1		
22	32	30176	FUEL LINE, ADAPTOR TO LOWE	1,1		
23	22	30174	ELBOW, LOWER FUEL PUMP INL	1,1		
24	22	30175	SLEEVE, FUEL PUMP INLET ELB	1,1		
25	22	30177	NUT, FUEL PUMP INLET ELBOW	1,1		
26	22	37682	ELBOW, FUEL LINE TO ADAPTO	1,1		
27		30186	ADAPTOR, CHECK UNIT (FUEL LI	1,1		
28		30187	STEM, CHECK UNIT ADAPTOR	1,1		
29	25	20415	"O"RING, ADAPTOR STEM	1,1		
30	24	30189	SPRING, ADAPTOR STEM	1,1		
31		30188	CUP WASHER, ADAPTOR	1,1		
32	10	37561	SCREW, ADAPTOR TO BOTTOM	2,2		
33	11	20184	NUT, ADAPTOR FASTENING SCF	2,2		
34	32	31550A 1	FUEL LINE ASSY, UPPER TO LO	1,1		