



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	2460A 3	GEAR HOUSING ASSEMBLY, COM	1		
-	1623	2460A 2	GEAR HOUSING ASSEMBLY, COM	1		
-	1623	2460A17	#GEAR HOUSING ASSEMBLY, CO	.1	SERIAL 00000000-01966151	
-	1623	2460A16	#GEAR HOUSING ASSEMBLY, CO	.1	SERIAL 00000000-01966151	
-	1623	2460A24	GEAR HOUSING ASSEMBLY, COM	.1	SERIAL 01966152-09999999	
-	1623	2460A25	GEAR HOUSING ASSEMBLY, COM	.1	SERIAL 01966152-09999999	
1	1623	2460A 4	#GEAR HOUSING ASSEMBLY-E	1.1	SERIAL 00000000-01966151	
1	1623	2460A20	GEAR HOUSING ASSEMBLY-SI	.1	SERIAL 01966152-09999999	
54		36288	CAM, SHIFT	1.1		
55		30625	FOLLOWER, CAM	1.1		
56		30624	SLIDE, CROSS PIN	1.1		
57	24	30622	SLIDE, COMPRESSION-CAM F	1.1		
58	15	30923A 1	SHIM, BEARING OUTER RACE	AR, AR		
--	43	31884A1	FORWARD GEAR ASSEMBLY, C	1		
--	43	34085A 1	FORWARD GEAR ASSEMBLY, C	.1		
59	43	31886	FORWARD GEAR ASSEMBLY	1		
59	43	34085	FORWARD GEAR ASSEMBLY	.1		
60	31	30895	BEARING, ROLLER-FORWARD	1.1		
61	31	30894A 1	TAPERED ROLLER BEARING	1.1		
62	31	31092	CUP, TAPERED ROLLER BE	1.1		
63	52	34239	RATCHET, SLIDING CLUTCH	1.1		
64	17	30632	PIN, CROSS-RATCHET TO PRO	1.1		
65	24	30893	SPRING, RETAINING-CROSS PII	1.1		
66	44	30944	SHAFT, PROPELLER	1.1		
--	43	31877A1	REVERSE GEAR ASSEMBLY, CC	1.1		
67	43	31887	REVERSE GEAR ASSEMBLY	1.1		
68	30	31265	BEARING, BALL-REVERSE GE	1.1		
69	12	30633	WASHER, THRUST-BEARING	1.1		
70	15	29955A 1	SHIM, THRUST WASHER TO GE	AR, AR		
71	25	29976	"O" RING, BEARING CARRIER	1.1		4
72		31284A 1	BEARING CARRIER ASSEMBLY	1.1		
73	31	30956	BEARING, ROLLER-BEARING	1.1		
74	26	30550	OIL SEAL, BEARING CARRIER	2.2		
75	28	30281	KEY, LOCATING-BEARING CARR	1.1		
76	12	29957	WASHER, GEAR HOUSING COV	1.1		
77		31037	COVER, GEAR HOUSING	1.1		
78		31640	TRIM TAB, GEAR HOUSING	1.1		
79	10	32470	SCREW, TRIM TAB TO GEAR HI	1.1		
80	12	45176	WASHER, GEAR HOUSING TO I	2		
81	11	22178	NUT, GEAR HOUSING TO DRIVE	2.2		
82	12	21612	WASHER, THRUST BEARING, CA	1.1		