



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		37628	WIRING HARNESS, INTERNAL	1,1		
2		30050	TERMINAL, HARNESS AND SW	AR,AR		
3		26079	PLATE, WIRING HARNESS TO B	1,1		
4	10	26128	SCREW, WIRING HARNESS AND	4,4		
5	24	28975	SPRING, GARTER - INTERNAL W	1,1		
6	54	22783	"S" CLIP, RECTIFIER HARNESS L	2,2		
7		30212	BLOCK, TERMINAL - EXHAUST C	1,1		
8	10	30663	SCREW, HARNESS LEADS TO T	1,1		
9	10	33152	SCREW, TERMINAL BLOCK TO E	2,2		
10	50	37274A 1	STARTER MOTOR ASSEMBLY	1,1		
11	13	26992	LOCKWASER, STARTER MOTOR	2,2		
12	11	20890	NUT, STARTER MOTOR TERMIN	2,2		
13	10	29197	SCREW, WIRING HARNESS LEA	1,1		
14	10	22698	SCREW, STARTER MOTOR TO C	2,2		
15	13	26993	LOCKWASHER, STARTER MOTO	2,2		
16		37331	PLATE, SPACER - STARTER MOT	1,1		
17		38747	BRACKET, SUPPORT - STARTER	1,1		
18	13	24669	LOCKWASHER, THRU BOLT - BR	2,2		
19	11	20890	NUT, THRU BOLT - BRACKET TO	2,2		
20		32445	SOLENOID, STARTER	1,1		
21	10	31208	SCREW, SOLENOID TO STARTE	2,2		
22	13	26996	LOCKWASER, SOLENOID TERMI	2,2		
23	11	20645	NUT, SOLENOID TERMINAL (#10	2,2		
24		28016A 1	GROUND STRAP ASSY, SOLENO	1,1		
25		25596	CABLE, WIRE - SOLENOID TO ST	1,1		
26	13	26993	LOCKWASER, SOLENOID TERMI	2,2		
27	11	F2008	NUT, SOLENOID TERMINAL (5/11	2,2		
28		32970	RECTIFIER ASSEMBLY	1,1		
29	13	26993	LOCKWASHER, RECTIFIER MO	1,1		
30	11	21929	NUT, RECTIFIER MOUNTING S	1,1		
31	32	28373	SLEEVE, RUBBER - RECTIFIER H	3,3		
32	10	29852	SCREW, HARNESS AND STATOF	3,3		
33	11	29488	NUT, HARNESS AND STATOR LE	3,3		