



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1128	1890A 1	END CAP ASSEMBLY, UPPER	1,1		
2	26	29476	OIL SEAL	1,1		
3	25	31305	"O" RING	1,1		4
4	30	32117	BALL BEARING	1,1		
5	15	31283A 1	SHIM, UPPER END CAP TO CRA	AR,AR		
6	10	30225	SCREW, UPPER END CAP MOUN	4,4		
7	834	2758A 3	CYLINDER BLOCK AND CRANKC	1,1		
8	17	20032	DOWEL PIN, CYLINDER BLOCK	2,2		
9	17	20033	DOWEL PIN, CRANKCASE TO C	2,2		
10	22	30139	PLUG, PIPE - WATER PRESSURE	1,1		
11	16	35099	STUD, CARBURETOR MOUNTI	4,4		
12	16	26133	STUD, CRANKCASE TO DRIVE	2,2		
13	16	26134	STUD, CYLINDER BLOCK TO D	2,2		
14	16	26135	STUD, CYLINDER BLOCK TO D	2,2		
15	16	37653	STUD, CYLINDER BLOCK TO D	2,2		
16	10	26132	SCREW, CRANKCASE TO CYLIND	2,2		
16	10	32293	SCREW, CRANKCASE TO CYLIND	12,12		
16	10	33860	SCREW, CRANKCASE TO CYLIND	2,2		
17	10	33008	SCREW, CRANKCASE AND STAF	2,2	(3 1/2")	
18	12	26825	WASHER, CRANKCASE AND STA	2,2		
19	10	26551	BRACKET, GROUND STRAP TO (1,1		
20	10	26548	SCREW, GROUND STRAP TO BF	1,1		
21	12	20583	WASHER, GROUND STRAP AND	1,1		
22	11	46793	NUT, CRANKCASE TO CYLIND	18,18		
23	10	36351	SCREW, MAIN BEARING LOCKIN	2,2		
24	14	20091	TAB WASHER, BEARING LOCKIN	3,3		
25	10	20359	SCREW, CENTER MAIN BEARING	1,1		
26	1126	1751A 1	END CAP ASSEMBLY, LOWER	1,1		
27	21	28481A 1	CHECK VALVE ASSEMBLY, ENC	1,1		
28	26	29478	OIL SEAL, LOWER	1,1		
29	26	29476	OIL SEAL, UPPER	1,1		
30	25	20081	"O" RING	1,1		4
31	30	20080	BALL BEARING	1,1		
32	15	20085A 1	SHIM, LOWER END CAP TO CRA	AR,AR		
33	10	30225	SCREW, LOWER END CAP MOUN	3,3		
34	32	33729	TUBE, BALANCE - MAIN BEARING	1,1		
35	22	25885	ELBOW, BALANCE TUBE TO MAI	2,2		
36	54	20386	CLAMP, BALANCE TUBE TO ELB	2,2		
37	27	37449	GASKET, CYLINDER BLOCK TO E	1,1		4
38		37447	PLATE, BAFFLE - EXHAUST MAN	1,1		
39	27	37444	GASKET, BAFFLE PLATE TO MAI	1,1		4