



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1552	2463A 1	DRIVE SHAFT HOUSING ASSEM	1,1		
1	1551	2459A 2	DRIVE SHAFT HOUSING ASSEM	1,1		
2	16	30929	STUD, DRIVE SHAFT HOUSING	2,2		
3	19	32298	PLUG, PLASTIC - TRIM TAB SCRE	1,1		
4		39018	ROD, PUSH - REVERSE LOCK(SH	1,1		
4		39017	ROD, PUSH - REVERSE LOCK(LO	1,1		
5	11	46794	NUT, JAM - PUSH ROD	1,1		
6		39022	YOKE, PUSH ROD	1,1		
7	17	39023	PIN, PUSH ROD TO REVERSE LC	1,1		
8	18	25191	COTTER PIN, PUSH ROD PIN	1,1		
9		37417	COVER, TRIM - DRIVE SHAFT HC	1,1		
10	10	37571	SCREW, TRIM COVER TO BOTTC	4,4		
11		37919	SEAL, TRIM COVER TO DRIVE SH	1,1		
12		37665	STRIP, RETAINING - TRIM COVEI	2,2		
13		38052	STRIP, RETAINING - TRIM COVEI	1,1		
14	10	38055	SCREW, RETAINING STRIP TO C	2,2		
15	10	37571	SCREW, RETAINING STRIP TO C	6,6		
16	12	30164	WASHER, RETAINING STRIP SCI	8,8		
17	32	37446	TUBE, WATER INLET(SHORT SH	1,1		
17	32	37438	TUBE, WATER INLET(LONG SHA	1,1		
18	23	29591	SLEEVE, RUBBER - WATER INLE	1,1		
19		38469	TUBE, EXHAUST (SHORT SHAFT	1,1		
19		38470	TUBE, EXHAUST (LONG SHAFT)	1,1		
20	10	38601	SCREW, EXHAUST TUBE TO EXI	3,3		
21	11	29322	NUT, EXHAUST TUBE SCREW	3,3		
22	11	23161	NUT, POWERHEAD STUDS	6,6		
23	11	20509	NUT, POWERHEAD STUDS	2,2		
24	12	20086	WASHER, POWERHEAD STUDS	2,2		
25	27	38471	GASKET, EXHAUST EXTENSION	1,1		4
26		37396	MOUNT, RUBBER - UPPER	2,2		
27		26218	COVER, UPPER MOUNT - OUTSH	2,2		
28		26217	COVER, UPPER MOUNT - INSIDE	2,2		
29		24929	PACKING, "U" CUP	2,2		
30	10	28773	SCREW, UPPER MOUNT COVER	4,4		
31	10	28775	SCREW, UPPER MOUNT COVER	4,4		
32	12	29245	WASHER, UPPER MOUNT COVE	AR,AR		
33	11	46886	NUT, UPPER MOUNT COVER SC	8,8		
34	12	30515	WASHER, UPPER MOUNT BOLT	2,2		
35	12	30516	WASHER, RUBBER - UPPER MOI	2,2		
36	12	30514	WASHER, UPPER MOUNT BOLT	2,2		
37	11	22178	NUT, UPPER MOUNT BOLT	2,2		