



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		30263A 2	FUEL PUMP ASSEMBLY - UPPER	1,1	
2	21	30430A 1	CHECK VALVE ASSEMBLY	1,1	
3		23014A 1	DIAPHRAGM KIT	1,1	4
4			GASKET, FUEL PUMP COVER	1,1	4
5			GASKET, FUEL PUMP	2,2	4
6			GASKET, CHECK VALVE TO	2,2	4
7		23004	RETAINER, CHECK VALVE	1,1	
8	10	20037	SCREW, RETAINER TO HOUSII	2,2	
9		30461A 2	FUEL PUMP ASSEMBLY - LOWEF	1,1	
2	21	30430A 1	CHECK VALVE ASSEMBLY	1,1	
3		23014A 1	DIAPHRAGM KIG	1,1	4
4			GASKET, FUEL PUMP COVE	1,1	4
5			GASKET, FUEL PUMP COVE	2,2	4
6			GASKET, CHECK VALVE TO	2,2	4
7		23004	RETAINER, CHECK VALVE	1,1	
8	10	20037	SCREW, RETAINER TO HOUSII	2,2	
10		30275	COVER, FUEL PUMP	2,2	
11	10	29878	SCREW, PUMP MOUNTING (1 1/	1,1	
12	10	30274	SCREW, PUMP MOUNTING (1 3/	2,2	
13	10	38036	SCREW, PUMP MOUNTING (1 1/	1,1	
14	10	30273	SCREW, PUMP MOUNTING (1 7/	2,2	
15	32	33154A 1	FUEL LINE ASSY, PUMP TO CAR	1,1	
16	22	29085	ELBOW (45), UPPER CARBURETI	1,1	
17	22	30174	ELBOW, UPPER FUEL PUMP OU'	1,1	
18	22	30175	SLEEVE, FUEL PUMP OUTLET EL	1,1	
19	22	30177	NUT, FUEL PUMP OUTLET ELBO	1,1	
20	32	31552A 1	FUEL LINE ASSY, PUMP TO PUM	1,1	
21	32	31553A 1	FUEL LINE ASSY, PUMP TO CAR	1,1	
22	32	30176	FUEL LINE, ADAPTOR TO LOWEI	1,1	
23	22	30174	ELBOW, LOWER FUEL PUMP INL	1,1	
24	22	30175	SLEEVE, FUEL PUMP INLET ELB	1,1	
25	22	30177	NUT, FUEL PUMP INLET ELBOW	1,1	
26	22	37682	ELBOW, FUEL LINE TO ADAPTOF	1,1	
27		30186	ADAPTOR, CHECK UNIT (FUEL LI	1,1	
28		30187	STEM, CHECK UNIT ADAPTOR	1,1	
29	25	20415	"O" RING, ADAPTOR STEM	1,1	
30	24	30189	SPRING, ADAPTOR STEM	1,1	
31		30188	CUP WASHER, ADAPTOR	1,1	
32	10	37990	SCREW, ADAPTOR TO BOTTOM	2,2	
32	10	37561	SCREW, ADAPTOR TO BOTTOM	1,1	
32	11	46887	NUT, ADAPTOR FASTENING SCE	2,2	