



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2115	3012	COWL, BOTTOM	1,1		
2		37415A	1 TRIM MOULDING ASSEMBLY, BC	1,1		
3		38046	SPLICER, TRIM MOULDING - RI	1,1		
4	10	29226	SCREW, DECORATIVE - MOULI	5,5		
5	12	24671	WASHER, FIBER - MOULDING F	2,2		
6	11	29225	NUT, NYLON CAP - MOULDING	2,2		
7	13	26995	LOCKWASHER, MOULDING FA	3,3		
8	11	26419	NUT, BRASS - MOULDING FAS	3,3		
9		37920A	1 COVER PLATE ASSEMBLY, BOT	1,1		
10		37940	PAD, SOUND - COVER PLATE	1,1		
11	10	30009	SCREW, COVER PLATE TO BOT	4,4		
12		37638	BOOT, CONTROL CABLES - BOT	1,1		
13		23760	BAFFLE, BOTTOM COWL	1,1		
14	10	21106	SCREW, BAFFLE TO BOTTOM CC	3,3		
15		37637	BOOT, FUEL CONNECTOR - BOT	1,1		
16		37445	SUPPORT, WIRING HARNESS - E	1,1		
17	10	37990	SCREW, WIRING HARNESS SUP	2,		
17	10	37561	SCREW, WIRING HARNESS SUP	,1		
17	10	21937	SCREW, WIRING HARNESS SUP	,1		
18	11	46887	NUT, WIRING HARNESS SUPPO	2,2		
19	32	26407	HOSE, TELL TALE - EXHAUST CC	1,1		
20	22	29111	CONNECTOR, TELL TALE HOSE	1,1		
21	22	25885	ELBOW, TELL TALE HOSE TO EX	1,1		
22	54	22976	CLAMP, TELL TALE HOSE TO CO	2,2		
23	27	37437	GASKET, POWERHEAD TO EXHA	1,1		4
24		38468A	4 PLATE ASSEMBLY, EXHAUST EX	1,1		
26	26	38970	SEAL, RUBBER - WATER INLET	1,1		4
27		38448	RETAINER, WATER TUBE SEA	1,1		
28	10	34439	SCREW, RETAINER TO EXTEN	1,1		
29	10	22421	SCREW, EXTENSION PLATE TO	1,1		
30	11	46887	NUT, EXHAUST EXTENSION PLA	1,1		
31	27	38471	GASKET, EXHAUST EXTENSION	1,1		4
32		37918	SEAL, EXHAUST EXTENSION PL	1,1		
33		38032	STRIP, RETAINING - EXHAUST E	1,1		
34	10	37571	SCREW, SEAL AND STRIP TO EX	5,5		
35		37824	BRACKET, SHIFT SHAFT HOLD C	1,1		
36	10	34222	SCREW, HOLD DOWN BRACKET	1,1		
37		37430A	1 SHIFT SHAFT ASSEMBLY, UPPE	1,1		
37		37431A	1 SHIFT SHAFT ASSEMBLY, UPPE	1,1		
38		46069A	1 LINK ROD ASSEMBLY(NOT AS SH	1,1		
39	12	28720	WASHER, WAVE - LINK ROD	2,2		