



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	2460A24	GEAR HOUSING ASSEMBLY, CO	1,1		
-	1623	2460A25	GEAR HOUSING ASSEMBLY, CO	1,1		
1	1623	2460A20	GEAR HOUSING ASSEMBLY (SI	1,1		
54		36288	CAM, SHIFT	1,1		
55		30625	FOLLOWER, CAM	1,1		
56		30624	SLIDE, CROSS PIN	1,1		
57	24	30622	SPRING, COMPRESSION - CAM	1,1		
58	15	30923A 1	SHIM, BEARING OUTER RACE	AR,AR		
59	43	34085	FORWARD GEAR ASSEMBLY	1,1		
60	31	30895	BEARING, ROLLER - FORWAR	1,1		
61	31	30894A 1	TAPERED ROLLER BEARING	1,1		
62	31	31092	CUP, TAPERED ROLLER BE	1,1		
63	52	34239	RATCHET, SLIDING CLUTCH	1,1		
64	17	30632	PIN, CROSS - RATCHET TO PR	1,1		
65	24	30893	SPRING, RETAINING - CROSS	1,1		
66	44	30944	SHAFT, PROPELLER	1,1		
61	43	31887	REVERSE GEAR ASSEMBLY	1,1		
68	30	31265	BEARING, BALL - REVERSE C	1,1		
69	12	30633	WASHER, THRUST - BEARIN	1,1		
70	15	29955A 1	SHIM, THRUST WASHER TO G	AR,AR		
71	25	29976	"O" RING, BEARING CARRIER	1,1		4
72		31284A 1	BEARING CARRIER ASSEMBLY	1,1		
73	31	30956	BEARING, ROLLER - BEARIN	1,1		
74	26	30550	OIL SEAL, BEARING CARRIEF	2,2		
75	28	30281	KEY, LOCATING - BEARING CA	1,1		
76	12	29957	WASHER, GEAR HOUSING COV	1,1		
77		31037	COVER, GEAR HOUSING	1,1		
78		31640A 1	TRIM TAB ASSEMBLY, GEAR H	1,1		
79	10	32470	SCREW, TRIM TAB TO GEAR H	1,1		
80	12	45176	WASHER, GEAR HOUSING TO	2,2		
81	11	22178	NUT, GEAR HOUSING TO DRIVE	2,2		
82	12	31013	WASHER, THRUST - BEARING C	1,1		
83		30581A 1	THRUST HUB AND WASHER AS	1,1		
84	12	29590	WASHER, CUPPER - THRUST	1,1		
85	12	31211	WASHER, SPLINED - PROPELLE	1,1		
86	14	31210	TAB WASHER, PROPELLER NUT	1,1		
87	11	29594	NUT, PROPELLER	1,1		
88	10	34353	SCREW, GEAR HOUSING TO DR	1,1		