



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2115	3205	COWL, BOTTOM	1,1		
1	2115	3617	COWL, BOTTOM	1,1		
2		37920A 1	COVER PLATE ASSEMBLY, BOT	1,1		
3		37940	PAD, SOUND-COVER PLATE	1,1		
4	10	30009	SCREW, COVER PLATE TO BOT	4,4		
5		52862A 1	DRIP TRAY ASSEMBLY, BOTTO	1,1		
6		37940	PAD, SOUND-DRIP TRAY	1,1		
7		37903	FLANGE, RUBBER-DRIP TRAY	1,1		
8	10	34222	SCREW, DRIP TRAY TO BOTTO	4		
9		37638	BOOT, CONTROL CABLES-BOTT	1,1,1		
10		23760	BAFFLE, BOTTOM COWL	1,1,1		
11	10	21106	SCREW, BAFFLE TO BOTTOM CC	3,3		
11	10	52867	SCREW, BAFFLE TO BOTTOM CC	3		
12		37637	BOOT, FUEL CONNECTOR-BOTT	1,1,1		
13		37445	SUPPORT, WIRING HARNESS-BI	1,1,1		
14	10	37561	SCREW, WIRING HARNESS SUP	1,1,1		
14	10	37990	SCREW, WIRING HARNESS SUP	1,1,1		
15	11	46887	NUT, WIRING HARNESS SUPPO	2,2,2		
16	32	26407	HOSE, TELL TALE - EXHAUST CC	1,1,1		
17	22	29111	CONNECTOR, TELL TALE HOSE	1,1		
18		52889	NOZZLE, TELL TALE HOSE TO B	1,1		
19	10	34222	SCREW, TELL TALE NOZZLE TO	1,1		
20	22	25885	ELBOW, TELL TALE HOSE TO EX	1,1,1		
21	54	48123	CLAMP, TELL TALE HOSE TO CO	2,2,2		
22	27	47257	GASKET, POWERHEAD TO EXHA	1,1,1		
23		38468A 4	PLATE ASSEMBLY, EXHAUST EX	1,1	SERIAL 00000000-02312935	
23		49087A 2	PLATE ASSEMBLY, EXHAUST EX	1,1	SERIAL 02312936-09999999	8
23		52932A 2	PLATE ASSEMBLY, EXHAUST EX	1,1		3
24	26	38970	SEAL, RUBBER-WATER INLET	1,1,1		
25		38448	RETAINER, WATER TUBE SEA	1,1,1		
26	10	34439	SCREW, RETAINER TO EXTENSI	1,1,1		
27	10	24226	SCREW, EXTENSION PLATE TO	1,1,1		
28	11	46887	NUT, EXHAUST EXTENSION PLA	1,1,1		
29	27	38471	GASKET, EXHAUST PLATE TO D	1,1,1		
30		37918	SEAL, EXHAUST EXTENSION PL	1,1,1		
31		38032	STRIP, RETAINING-EXHAUST EX	1,1,1		
32	10	37571	SCREW, SEAL AND STRIP TO EX	5,5,5		
33		47325A 1	SHIFT SHAFT ASSEMBLY, UPPE	1,1		
33		47326A 1	SHIFT SHAFT ASSEMBLY, UPPE	1,1		
33		49904A 1	SHIFT SHAFT ASSEMBLY, UPPE	1,1	SERIAL 00000000-02606012	
33		49905A 1	SHIFT SHAFT ASSEMBLY, UPPE	1,1	SERIAL 00000000-02606012	