



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1128	3367A 1	END CAP ASSEMBLY, UPPER	1,1,1		
2	26	29476	OIL SEAL	1,1,1		
3	25	31305	"O" RING	1,1,1		4
4	15	31283A 1	SHIM, UPPER END CAP TO CRA	AR,AR,		
5	10	30225	SCREW, UPPER END CAP MOUN	4,4,4		
6	834	3261A 3	CYLINDER BLOCK AND CRANKC	1,1,		
6	834	3729A 3	CYLINDER BLOCK AND CRANKC	,,1		
7	17	20032	DOWEL PIN, CYLINDER BLOCK	2,2,2		
8	17	20033	DOWEL PIN, CRANKCASE TO C	2,2,2		
9	22	32802	PLUG, PIPE-WATER PRESSUR	1,1,1		
10	16	35099	STUD, CARBURETOR MOUNTI	4,4,4		
11	16	26133	STUD, CRANKCASE TO DRIVE	2,2,2		
12	16	26134	STUD, CYLINDER BLOCK TO D	2,2,2		
13	16	26135	STUD, CYLINDER BLOCK TO D	2,2,	SERIAL 00000000-02312935	
14	16	37653	STUD, CYLINDER BLOCK TO D	2,2,	SERIAL 00000000-02312935	
14	16	48770	STUD, CYLINDER BLOCK TO D	4,4,4	SERIAL 02312936-09999999	*
15	10	26132	SCREW, CRANKCASE TO CYLINC	2,2,2		
15	10	32293	SCREW, CRANKCASE TO CYLINC	12,12,1		
15	10	33860	SCREW, CRANKCASE TO CYLINC	2,2,2		
16	10	33008	SCREW, CRANKCASE&STARTER	2,2,2		
17	12	26825	WASHER, CRANKCASE AND STA	2,2,2		
18		26551	BRACKET, GROUND STRAP TO	1,1,1		
19	10	26548	SCREW, GROUND STRAP TO BF	1,1,1		
20	12	20084	WASHER, GROUND STRAP AND	1,1,1		
21	11	46793	NUT, CRANKCASE TO CYLINC	18,18,1		
22	10	36351	SCREW, MAIN BEARING LOCKIN	2,2,2		
23	14	20091	TAB WASHER, BEARING LOCKIN	3,3,3		
24	10	20359	SCREW, CENTER MAIN BEARINC	1,1,1		
25	1126	3369A 1	END CAP ASSEMBLY, LOWER	1,1,		
25	1126	3369A 2	END CAP ASSEMBLY, LOWER	,,1		
26	21	28481A 1	CHECK VALVE ASSEMBLY, ENC	1,1,1		
27	26	29478	OIL SEAL, LOWER	1,1,		
28	26	29476	OIL SEAL, UPPER	1,,		
28	26	29476	OIL SEAL, UPPER	,,2		
29	25	20081	"O" RING	1,1,1		4
30	15	20085A 1	SHIM, LOWER END CAP TO CRA	AR,AR,		
31	10	30225	SCREW, LOWER END CAP MOUN	3,3,3		
32	32	33729	TUBE, BALANCE-MAIN BEARING	1,1,1		
33	22	25885	ELBOW, BALANCE TUBE TO MAI	2,2,2		
34	54	20386	CLAMP, BALANCE TUBE TO ELB	2,2,2		
34	54	20387	CLAMP, LOWER BLEED HOSE	2,		