



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1552	2463A 5	DRIVE SHAFT HOUSING ASSEM	1,1	SERIAL 00000000-02312935	
1	1552	3429A 3	DRIVE SHAFT HOUSING ASSEM	1,1	SERIAL 02312936-09999999	
1	1552	3670A 3	DRIVE SHAFT HOUSING ASSEM	,1		
1	1551	2459A 8	DRIVE SHAFT HOUSING ASSEM	1,1	SERIAL 00000000-02312935	
1	1551	3428A 4	DRIVE SHAFT HOUSING ASSEM	1,1	SERIAL 02312936-09999999	
1	1551	3669A 4	DRIVE SHAFT HOUSING ASSEM	,1		
2	16	47165	STUD, DRIVE SHAFT HOUSING	2,2		
2	16	46910	STUD, DRIVE SHAFT HOUSING	,2		
3	19	47579	PLUG, PLASTIC -TRIM TAB SCF	1,1,1		
4	10	48409	CREW, RETAINING STRIP TO	2,2,2		
5	10	48408	SCREW, RETAINING STRIP TO	6,6,6		
6		37417	COVER, TRIM-DRIVE SHAFT HOL	1,1,1		
7	10	37571	SCREW, TRIM COVER TO BOTTC	4,4,4		
8		37919	SEAL, TRIM COVER TO DRIVE SH	1,1,1		
9		37665	STRIP, RETAINING-TRIM COVER	2,2,2		
10		38052	STRIP, RETAINING-TRIM COVER	1,1,1		
11	32	37446	TUBE, WATER INLET (SHORT SH	1,1,1		
11	32	37438	TUBE, WATER INLET (LONG SHA	1,1,1		
12	23	29591	SLEEVE, RUBBER-WATER INLET	1,1,		
13		38469	TUBE, EXHAUST (SHORT SHAFT	1,1,1		
13		38470	TUBE, EXHAUST (LONG SHAFT)	1,1,1		
14	10	38601	SCREW, EXHAUST TUBE TO EXH	2,2,2		
15	11	29322	NUT, EXHAUST TUBE SCREW	2,2,2		
16	11	23161	NUT, POWERHEAD STUDS	6,6,6		
17	11	20509	NUT, POWERHEAD STUDS	2,2,2		
18	12	20086	WASHER, POWERHEAD STUDS	2,2,2		
19	27	38471	GASKET, EXHAUST EXTENSION	1,1,1		4
20		47560	GUIDE, PUSH ROD-REVERSE LO	1,1,		
20		52887	GUIDE, PUSH ROD-REVERSE LO	,1		
21		47591	ROD, PUSH-REVERSE LOCK (SH	1,1,1		
21		47558	ROD, PUSH-REVERSE LOCK (LO)	1,1,1		
22	11	47661	NUT, JAM-PUSH ROD	1,1,1		
23		47559	YOKE, PUSH ROD	1,1,1		
24	17	39023	PIN, PUSH ROD TO REVERSE LC	1,1,1		
25	18	25191	COTTER PIN, PUSH ROD PIN	1,1,1		
26		37396	MOUNT, RUBBER-UPPER	2,2,2		
27		26218	COVER, UPPER MOUNT-OUTSID	2,2,2		
28		26217	COVER, UPPER MOUNT-INSIDE I	2,2,2		
29		24929	PACKING, "U" CUP	2,2,2		
30	10	28773	SCREW, UPPER MOUNT COVER	4,4,4		
31	10	28776	SCREW, UPPER MOUNT COVER	4,4,4		