



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	2460A35	GEAR HOUSING ASSEMBLY, CO	1,1	SEE NOTE BELOW	
-	1623	2460A36	GEAR HOUSING ASSEMBLY, CO	1,1	SEE NOTE BELOW	
-	1623	3486A 8	GEAR HOUSING ASSEMBLY, CO	,,1	SEE NOTE BELOW	
-	1623	3486A 9	GEAR HOUSING ASSEMBLY, CO	,,1	SEE NOTE BELOW	
1	1623	2460A20	GEAR HOUSING ASSEMBLY	1,1		
1	1623	3486A 4	GEAR HOUSING ASSEMBLY	,,1		
2	16	45199	STUD, GEAR HOUSING TO D	1,1,1		
3	16	45198	STUD, GEAR HOUSING TO D	2,2		
3	16	52614	STUD, GEAR HOUSING TO D	,,2		
4	16	36292	STUD, WATER PUMP BASE A	1,1,1		
5	16	37435	STUD, WATER PUMP BASE A	2,2,2		
6	31	32898	BEARING, ROLLER-DRIVE SH	1,1,1		
7	45	47433	DRIVE SHAFT (SHORT SHAFT)	1,1,1		
7	45	47434	DRIVE SHAFT (LONG SHAFT)	1,1,1		
8	43	47351	GEAR, PINION-DRIVE SHAFT	1,1		
8	43	49751	GEAR, PINION-DRIVE SHAFT	,,1		
9	11	35921	NUT, PINION GEAR TO DRIVE	1,1,1		
10	15	30278A 1	SHIM, DRIVE SHAFT BALL BEA	AR,AR,		
11	30	20464	BEARING, BALL-DRIVE SHAFT	1,1,1		
12	53	30726	RING, RETAINING-BALL BEARII	1,1,1		
10	15	30278A 1	SHIM, WATER PUMP BASE TO	AR,AR,		
13	27	32438	GASKET, WATER PUMP BASE	1,1,1		4
14	25	30224	"O" RING, WATER PUMP BASE	1,1,1		4
15	46	38931A 1	WATER PUMP BASE ASSEMBL	1,1		
15	46	48747A 1	WATER PUMP BASE ASSEMBL	,,1		
16	26	31489	OIL SEAL, WATER PUMP BAS	1,1,1		
17	26	31507	OIL SEAL, WATER PUMP BAS	1,1,1		
18	17	35973	DOWEL PIN, WATER PUMP E	2,2,2		
19	27	32433	GASKET, LOWER-WATER PUM	1,1,1		4
20		32435	PLATE, FACE-WATER PUMP B	1,1,1		
21	27	32434	GASKET, UPPER-FACE PLATE	1,1,1		4
22	46	37433A 1	WATER PUMP BODY ASSEMBL	1,1		
22	46	48743A 1	WATER PUMP BODY ASSEMBL	,,1		
23		30915	INSERT, WATER PUMP BOD	1,1		
23		48752	INSERT, WATER PUMP BOD	,,1		
24	26	31507	OIL SEAL, WATER PUMP BOI	1,1,1		
25	26	38970	SEAL, RUBBER-WATER INLE	1,1,1		
26	47	30221	IMPELLER, WATER PUMP	1,1,1		
27	17	29967	PIN, IMPELLER DRIVE	1,1,1		
28	10	30720	SCREW, WATER PUMP BODY	1,1,1		
29	12	26982	LOCKWASHER, WATER PUM	2,2		