



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	2460A35	GEAR HOUSING ASSEMBLY, CO	1,1	SEE NOTE BELOW	
-	1623	2460A36	GEAR HOUSING ASSEMBLY, CO	1,1	SEE NOTE BELOW	
-	1623	3486A 8	GEAR HOUSING ASSEMBLY, CO	,,1	SEE NOTE BELOW	
-	1623	3486A 9	GEAR HOUSING ASSEMBLY, CO	,,1	SEE NOTE BELOW	
1	1623	2460A20	GEAR HOUSING ASSEMBLY-SE	1,1		
1	1623	3486A 4	GEAR HOUSING ASSEMBLY	,,1		
55		36288	CAM, SHIFT	1,1,1	SERIAL 00000000-02712072	
55		54346	CAM, SHIFT	,,1	SERIAL 02712073-09999999	
56		30625	FOLLOWER, CAM	1,1,1		
57		20634	SLIDE, CROSS PIN	1,1,1		
58	24	30622	SPRING, COMPRESSION-CAM F	1,1,1		
59	15	30923A 1	SHIM, BEARING OUTER RACE	AR,AR,		
60	31	30894A 1	TAPERED ROLLER BEARING A	1,1,1		
61	31	30895	BEARING, ROLLER-FORWARD	1,1,1		
62	43	34085	FORWARD GEAR ASSEMBLY	1,1		
62	43	53100	FORWARD GEAR ASSEMBLY	,,1		
63	52	34239	RATCHET, SLIDING CLUTCH	1,1,1		
64	17	30632	PIN, CROSS-RATCHET TO PRO	1,1,1		
65	24	30893	SPRING, RETAINING-CROSS PI	1,1,1		
66	44	47900	SHAFT, PROPELLER	1,1		
66	44	52542	SHAFT, PROPELLER	,,1		
67	43	31887	REVERSE GEAR ASSEMBLY	1,1,1		
68	15	29955A 1	SHIM, THRUST WASHER TO G	AR,AR,		
69	12	30633	WASHER, THRUST-BEARING C	1,1,1		
70	30	31265	BEARING, BALL-REVERSE GEA	1,1,1		
71	25	29976	"O" RING, BEARING CARRIER	1,1,1		4
72		31284A 1	BEARING CARRIER ASSEMBLY	1,1		
72		52132A 1	BEARING CARRIER ASSEMBLY	,,1		
73	31	30956	BEARING, ROLLER-BEARING	1,1,1		
74	26	30550	OIL SEAL, BEARING CARRIER	2,2,2		
75	28	30281	KEY, LOCATING-BEARING CAR	1,1,1		
76	12	29957	WASHER, GEAR HOUSING CO	1,1		
77		31037	COVER, GEAR HOUSING	1,1		
76	14	52700	TAB WASHER, GEAR HOUSING	,,1		
77		52699	COVER, GEAR HOUSING	,,1		
78		31640A 1	TRIM TAB ASSEMBLY, GEAR H	1,1,1		
79	10	47580	SCREW, TRIM TAB TO GEAR H	1,1,1		
80	12	45176	WASHER, GEAR HOUSING TO	2,2,2		
81	11	34933	NUT, GEAR HOUSING TO DRIVE	2,2,2		
82	10	34353	SCREW, GEAR HOUSING TO DR	1,1,1		
82	12	31012	WASHER, THRUST BEARING CA	1,1		