



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	332	4177A 3	HOUSING ASSEMBLY, DISTRIBU	1		
2		32197	STOP, SPARK ADVANCE - DISTR	1		
3	17	27962	PIN, ANCHOR SPRING - DISTRIB	1		
4	24	27944	SPRING, HORSESHOE - DISTRIB	1		
5	12	53540	WASHER, ECONOMIZER COLLA	1		
6		55804A 1	ECONOMIZER COLLAR ASSEMBL	1		
7	17	27961	PIN, ECONOMIZER COLLAR - S	1		
8	22	25094	FITTING, GREASE - ECONOMIZ	1		
9		27947	SWIVEL, LINKAGE - ECONOMIZE	1		
10		25996A 1	SWIVEL AND LINK ROD ASSEMB	1		
11	11	25168	NUT, UPPER LINK ROD ADJUSTI	1		
12		37588	ROD, LINK - UPPER	1		
13		27948	SWIVEL, UPPER LINK ROD TO T	1		
14		48562	LEVER, THROTTLE CONTROL	1		
15	13	25806	WASHER, WAVE - THROTTLE CC	1		
16	12	29245	WASHER, THROTTLE CONTROL	1		
17	11	20361	NUT, UPPER LINK ROD TO THR	1		
18	10	37559	SCREW, THROTTLE LEVER TO E	1		
19	12	29395	WASHER, THROTTLE CONTROL	1		
20	23	45818	BUSHING, THROTTLE CONTROL	1		
22		37587	SWIVEL, LOWER - THROTTLE CI	1		
23	11	20361	NUT, THROTTLE CABLE TO LOW	1		
24		48306	PLATE, THROTTLE ACTUATOR	1		
25	10	23702	SCREW, ADJUSTING - THROTTL	1		
26	11	20645	NUT, THROTTLE ACTUATOR AD	1		
27		48039	CAP, NYLON - THROTTLE ACTU	1		
28	10	32228	SCREW, THROTTLE ACTUATOR	2		
29	12	20128	WASHER, THROTTLE ACTUATO	2		
30	13	26996	LOCKWASHER, THROTTLE ACTI	2		
31	12	46246	WASHER, ADAPTOR - DISTRIBU	1		
32		48666A 1	ADAPTOR ASSEMBLY, DISTRIBL	1		
33	22	25094	FITTING, GREASE - DISTRIBU	1		
34	10	22040	SCREW, DISTRIBUTOR HOUSINI	3		
35	12	20084	WASHER, DISTRIBUTOR HOUSII	3		
36	11	20083	NUT, DISTRIBUTOR HOUSING S	3		
37		55805	BRACKET, STOP	1		
38	10	28636	SCREW, STOP BRACKET TO DIS	2		
39	12	20533	WASHER, STOP BRACKET FAST	2		
40	10	24228	SCREW, STOP BRACKET ADJUS	3		
41	11	20890	NUT, STOP BRACKET ADJUSTIN	3		
42		52022	CAP, NYLON, STOP BRACKET AI	2		