



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	3912A 4	GEAR HOUSING ASSEMBLY, CO	1	SEE NOTE BELOW SERIAL #280	
-	1623	3912A 5	GEAR HOUSING ASSEMBLY, CO	1	SEE NOTE BELOW SERIAL #280	
-	1623	4021A 4	GEAR HOUSING ASSEMBLY, CO	1	SEE NOTE BELOW SERIAL #290	
-	1623	4021A 5	GEAR HOUSING ASSEMBLY, CO	1	SEE NOTE BELOW SERIAL #290	
1	1623	3912A 6	GEAR HOUSING ASSEMBLY	1	SEE PAGE 27 FOR BREAKDOWN	
1	1623	4021A 6	GEAR HOUSING ASSEMBLY	1	SEE PAGE 27 FOR BREAKDOWN	
60		54346	CAM, SHIFT	1		
61		30625	FOLLOWER, CAM	1		
62		30624	SLIDE, CROSS PIN	1		
63	24	30622	SPRING, COMPRESSION - CAM	1		
64	15	30923A 1	SHIM, BEARING OUTER RACE	AR		
65	31	30894A 1	TAPERED ROLLER BEARING A	1		
66	31	30895	BEARING, ROLLER - FORWARD	1		
67	43	53982	FORWARD GEAR ASSEMBLY	1	SERIAL #2803562-#2874263	
67	43	56517	FORWARD GEAR ASSEMBLY	1	SERIAL #2997339-09999999	
68	52	34239	RATCHET, SLIDING CLUTCH	1		
69	17	30632	PIN, CROSS - RATCHET TO PR	1		
70	24	30893	SPRING, RETAINING - CROSS F	1		
71	44	52542	SHAFT, PROPELLER	1		
72	43	53983	REVERSE GEAR ASSEMBLY (S	1	SERIAL #2803562-#2874263	
72	43	56516	REVERSE GEAR ASSEMBLY (S	1	SERIAL #2997339-09999999	
73	15	29955A 1	SHIM, THRUST WASHER TO G	AR		
74	12	30633	WASHER, THRUST - BEARING	1		
75	30	31265	BEARING, BALL - REVERSE GE	1		
76	25	29976	"O" RING, BEARING CARRIER	1		2,4
77		52132A 1	BEARING CARRIER ASSEMBLY	1		
78	31	30956	BEARING, ROLLER - BEARING	1		
79	26	30550	OIL SEAL, BEARING CARRIER	2		
80	28	30281	KEY, LOCATING - BEARING CA	1		
81	14	52700	TAB WASHER, GEAR HOUSING	1		
82		52699	COVER, GEAR HOUSING	1		
83		31640A 1	TRIM TAB ASSEMBLY, GEAR H	1		
84	10	55726	SCREW, TRIM TAB TO GEAR H	1		
85	12	45176	WASHER, GEAR HOUSING TO	2		
86	11	34933	NUT, GEAR HOUSING TO DRIVE	2		
87	10	34353	SCREW, GEAR HOUSING TO DR	1		
88		46961A 1	THRUST HUB AND WASHER AS:	1		
89	12	29590	WASHER, CUPPED - THRUST H	1		
90	12	31211	WASHER, SPLINED - PROPELLER	1		
91	14	31210	TAB WASHER, PROPELLER NUT	1		
92	11	52707	NUT, PROPELLER	1		