



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1643	4814A 7	GEAR HOUSING ASSEMBLY, COM	1	SEE NOTE BELOW	
-	1643	4814A 8	GEAR HOUSING ASSEMBLY, COM	1	SEE NOTE BELOW	
1	1643	4814A 9	GEAR HOUSING ASSEMBLY	1		
2	17	21438	PIN, DOWEL - GEAR HOUSIN	2		
3	16	33778	STUD, WATER PUMP BODY/	3		
4	16	57933	STUD, GEAR HOUSING TO D	2		
5	31	62091	BEARING, ROLLER - DRIVE S	1		
6		38071	PLATE, SUPPORT - EXHAUST	1		
7		37721	SEAL, EXHAUST TUBE	1		4
8	43	60245	GEAR, PINION - DRIVE SHAFT	1		
9	11	55910	NUT, PINION GEAR TO DRIVE	1		
10	27	32771	GASKET, WATER PUMP BASE	1		4
11	25	26855	"O" RING, WATER PUMP BASE	1		4
12	46	48745A 1	WATER PUMP BASE ASSEMBL	1		
13	26	26782	OIL SEAL, WATER PUMP BAS	1		
14	26	23300	OIL SEAL, WATER PUMP BAS	1		
15	17	35973	DOWEL PIN, WATER PUMP E	2		
16	27	32769	GASKET, LOWER - WATER PUI	1		4
17		54705	PLATE, FACE - WATER PUMP E	1		
18	27	32770	GASKET, UPPER - FACE PLATE	1		4
19	47	20268	IMPELLER, WATER PUMP	1		
20	28	56662	KEY, IMPELLER DRIVE	1		
21	46	48746A 1	WATER PUMP BODY ASSEMBL	1		
22		48753	INSERT, WATER PUMP BOD	1		
23	26	32121	OIL SEAL, WATER PUMP BOD	1		
24	12	29245	WASHER, WATER PUMP BOD	3		
25	11	35045	NUT, WATER PUMP BODY ANI	3		
26	26	38452	SEAL, WATER PUMP BODY TO	1		4
27	12	38453	WASHER, CUPPED - WATER T	1		
28	25	20273	RING, RUBBER - CENTRIFUGA	1		4
29	10	28634	SCREW, GREASE FILLER AND	2		
30	12	20260	WASHER, GREASE FILLER ANI	2		
31	19	48750	PLUG, GEAR HOUSING FLUSHI	1		
32	12	49221	WASHER, GEAR HOUSING FLL	1		
33		60241A 1	SHAFT ASSEMBLY, SHIFT - LO	1		
34	53	29641	CLIP, RETAINING - SHIFT SHA	1		
35	25	25439	"O" RING, SHIFT SHAFT BUSHI	1		4
36	23	55419A 1	BUSHING ASSEMBLY, SHIFT SI	1		
37	26	24590	OIL SEAL, SHIFT SHAFT BUSI	1		
38	26	31249	OIL SEAL, SHIFT SHAFT BUSI	1		
39	12	21266	WASHER, RUBBER, SHIFT SH	1		